
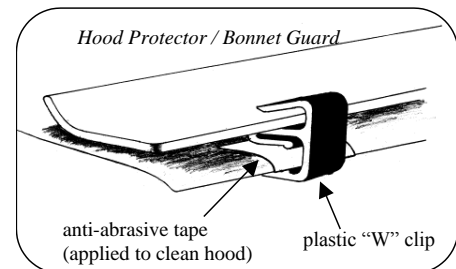


## Grand Cherokee. p/n BG443DW

### HOOD PROTECTOR / BONNET GUARD FITTING INSTRUCTIONS:

Please read instructions completely before installation.

1. Clean and open the hood and position the Bonnet Guard in place ensuring that it is centrally located.
2. Mark position of the 2 predrilled holes in underside of Bonnet Guard.
3. Remove the Bonnet Guard and slide supplied metal clips into place in marked positions (see diagram here).
4. Reposition the Bonnet Guard and fasten to hood with supplied screws.
5. Fit the 2 black plastic "W" clips to the front holes on the Bonnet Guard and apply the anti-abrasive tape to the edge of hood to coincide with the clips as shown. Use the supplied alcohol prep pads to cleanse the area first.
6. "Bump" the plastic "W" clips onto the hood over the anti-abrasive tape.
7. THE HOOD PROTECTOR MUST NOT TOUCH THE HOOD WHEN IN USE.

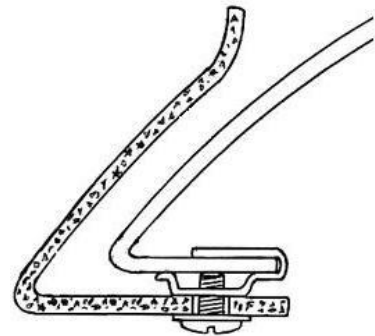

***CLOSE THE HOOD BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE HOOD.  
NEVER PRESS ON THE HOOD PROTECTOR!***

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.  
No authorisation by or association with any automobile manufacturer is implied.

Made in New Zealand

INSPECTED BY: