

# AIRPLEX INDUSTRIES LIMITED

AUTOMOTIVE ACCESSORY MANUFACTURERS

21 SALEYARDS ROAD, OTAHUHU, AUCKLAND, NEW ZEALAND

P.O. BOX 11-286, ELLERSLIE, AUCKLAND, NEW ZEALAND

PHONE 64 (9) 276-9826 - FAX 64 (9) 276-9836

Email info@airplex.co.nz, www.airplex.co.nz


FIT425



## BONNET GUARD FITTING INSTRUCTIONS: PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION.

### HYUNDAI TUCSON / ix35 2010+ P/N BG509D

1. Open the Bonnet and fit the Bonnet Guard in place ensuring that it is centrally located. With the holes in the Bonnet Guard lining up with the holes in the Bonnet.
2. Fasten securely using the supplied "push pins" and washers. (the washer goes between the "push pin" and the bonnet guard.)
3. Stick the anti-abrasive tape on edge of Bonnet where plastic fastening clip secures the Bonnet Guard near the fenders.
4. Snap the plastic clips into hole positions on Bonnet Guard as shown, over the anti-abrasive tape.

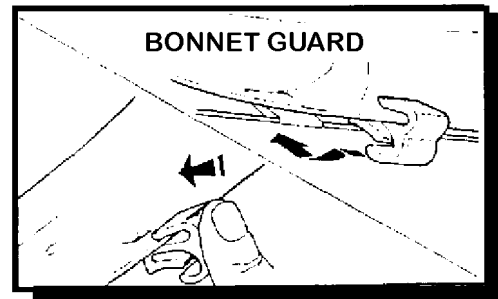

***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.  
NEVER PRESS ON THE BONNET GUARD.***

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.  
No authorization by or association with any automobile manufacturer is implied.

Made in New Zealand

INSPECTED BY: