

JEEP COMMANDER



(p/n BG457DW)

BONNET GUARD FITTING INSTRUCTIONS:

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION.

FIT045

1. Open the hood centrally locate the Bonnet Guard in place. Then remove the Bonnet Guard.
2. Note the 2 holes in lower tabs of Bonnet Guard that coincide with the 2 large holes in underside of bonnet.

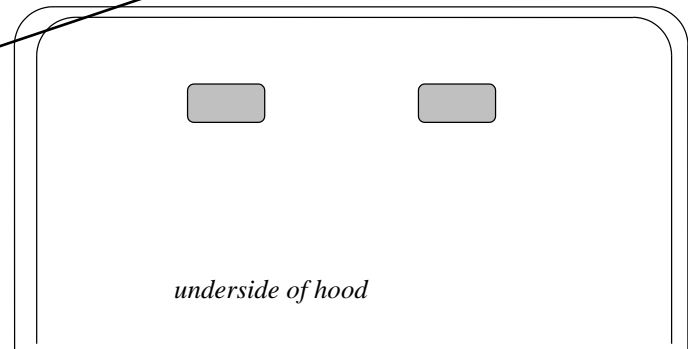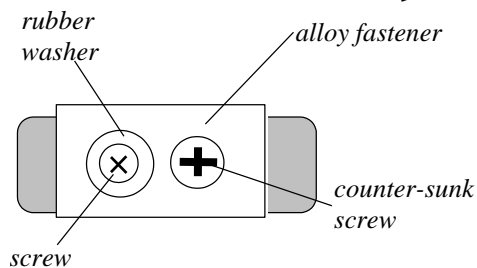

3. Remove screw and washer combination from each pre-assembled bracket. **Do not remove "counter sunk screw"!**
4. Position 1 pair of brackets either side of large steel hole underside of bonnet. (each of the "counter sunk screws" must be located towards center of bonnet). Loosely tighten in position using "counter sunk screw".
5. Position Bonnet Guard on hood and fasten to hood by inserting the previously removed "screw" through the Bonnet Guard, also using the washer.
6. When positioned correctly, firmly tighten each of the "counter sunk" screws.
7. Stick the anti-abrasive tape on edge of hood where plastic fastening clip secures the Bonnet Guard near the fenders.
8. It is the drivers responsibility to regularly check that the Bonnet Guard never touches the hood. Replacement parts are readily available from the Distributor. The Bonnet Guard should not come into contact with the hood paintwork at any time.

CLOSE THE HOOD BY DROPPING FROM 6" HEIGHT. ASSIST CLOSURE ONLY BY PRESSING ON THE HOOD.
NEVER PRESS ON THE BONNET GUARD.

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.