

# *Airplex* INDUSTRIES LIMITED



AUTOMOTIVE ACCESSORY MANUFACTURERS "fine acrylic products"  
 21 SALEYARDS ROAD, OTAHUHU, AUCKLAND, NEW ZEALAND  
 P.O. BOX 11-286, ELLERSLIE, AUCKLAND, NEW ZEALAND  
 PHONE 64 (9) 276-9826 - FAX 64 (9) 276-9836  
 Email: info@airplex.co.nz - www.airplex.co.nz



## MERCEDES SPRINTER 2014+ PART NO. BG553D

### BONNET GUARD FITTING INSTRUCTIONS:

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION.

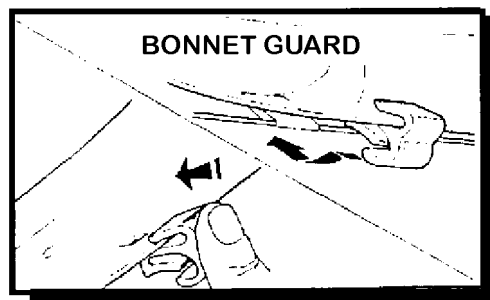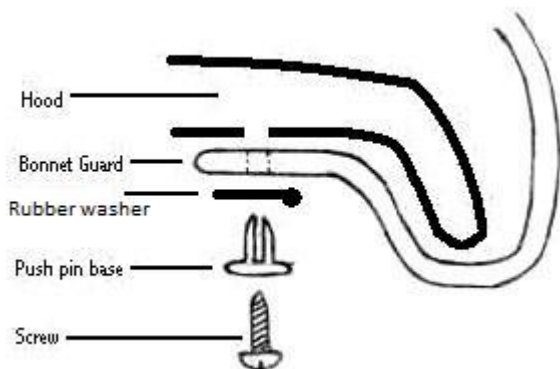

1. Clean and open bonnet.
2. Position the Bonnet Guard on the hood and note the 4 hole positions and remove the 4 plastic retaining clips
3. Insert the tabs of the Bonnet Guard between the rubber washer and the bonnet.
4. Fasten Bonnet Guard with 4 supplied push pin bases & plastic screws, first through the rubber washer, and then through the Bonnet Guard and into the hole in the bonnet.
5. Note: Hold the push-pin base when fixing Bonnet Guard to vehicle to ensure firmly tightened.
6. Stick the anti-abrasive tape on edge of hood where plastic fastening clip secures the Bonnet Guard near the fenders. Use the supplied alcohol prep-pads to cleanse the area first.
7. Snap plastic clip into hole position on Bonnet Guard as shown, over the anti-abrasive tape.

Hood adjustment: After fitment of Bug Guard, it is important to check if there is sufficient room between the hood and the grille. Close hood slowly to determine if room is sufficient. If doubtful, it is advisable to adjust the hood stops to allow more room.

**CLOSE THE HOOD BY DROPPING FROM 6" HEIGHT.  
 ASSIST CLOSURE ONLY BY PRESSING ON THE HOOD.  
 NEVER PRESS ON THE HOOD PROTECTOR.**

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.  
 No authorization by or association with any automobile manufacturer is implied.