

AIRPLEX INDUSTRIES LIMITED

AUTOMOTIVE ACCESSORY MANUFACTURERS

21 SALEYARDS ROAD, OTAHUHU, AUCKLAND, NEW ZEALAND

P.O. BOX 11-286, ELLERSLIE, AUCKLAND, NEW ZEALAND

PHONE 64 (9) 276-9826 - FAX 64 (9) 276-9836

Email info@airplex.co.nz, www.airplex.co.nz

FIT426




BONNET GUARD FITTING INSTRUCTIONS:

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION.

NISSAN NAVARA STX /PATHFINDER 2010+ P/N BG515DW

1. Clean and open bonnet.
2. Test Bonnet Guard on the bonnet and note 4 weather-strip fasteners in bonnet that correspond with 4 pre-drilled holes in Bonnet Guard.
3. Remove the 4 plastic fasteners.
4. Fit Bonnet Guard in position, then rubber weather-strip and fasten securely with supplied plastic "push pin" bases and steel screws, as shown in the diagram below..

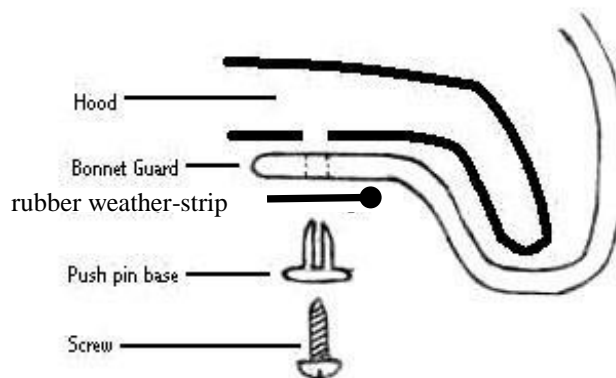

***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.
NEVER PRESS ON THE BONNET GUARD.***

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.
No authorization by or association with any automobile manufacturer is implied.

Made in New Zealand

INSPECTED BY:

