

NISSAN X-TRAIL T31


PART NO XDT31-BG482D

BUG DEFLECTOR FITTING INSTRUCTIONS: FIT087


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION.

1. Clean and open bonnet.
2. Trial fit the Bonnet Guard and note the 2 pre-drilled holes in the Bonnet Guard that correspond with the holes in the underside of bonnet.
3. Fit Bonnet Guard in position, and fasten securely with supplied plastic "push pins". Note sequence as per diagram as below.

Some vehicles will have a "rubber weather-strip" attached to the underside of bonnet. If so, insert the Bonnet Guard between the bonnet and the weather-strip.

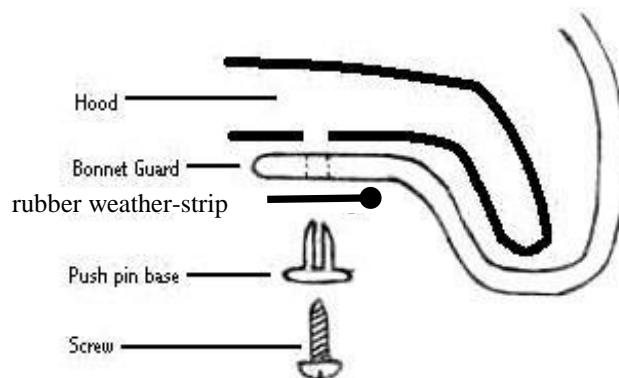

4. Apply the anti-abrasive tape on edge of hood where plastic fastening clip secures the Bonnet Guard near the fenders. Use the supplied alcohol prep-pads to cleanse the area first.
5. Snap 2 supplied plastic "W" clip into hole position on Bonnet Guard as shown, over the anti-abrasive tape.

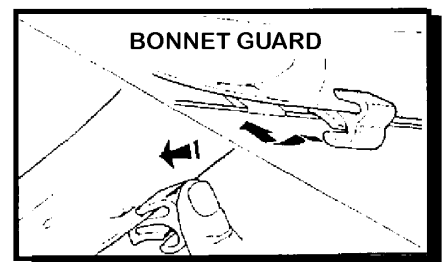

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.
No authorization by or association with any automobile manufacturer is implied.



**CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE
BONNET.
NEVER PRESS ON THE BONNET GUARD.**