


BONNET GUARD FITTING INSTRUCTIONS :
PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION.

FIT265

**RANGE ROVER SPORT 2006+
P/N BG461D**

1. Clean vehicle bonnet.
2. Open the bonnet and place the Bonnet Guard on the bonnet.
3. Note the pre-drilled hole in the Bonnet Guard that corresponds with the hole in the bonnet.
4. Remove the Bonnet Guard and insert the white plastic "grommet" into the bonnet hole, with the straight edge facing towards the front of the bonnet.
5. Place Bonnet Guard on the bonnet and fasten Bonnet Guard to bonnet with the supplied mush wash screw.
6. Apply the anti-abrasive tape on edge of bonnet where plastic fastening clip secures the Bonnet Guard near the fenders. Use the supplied alcohol prep-pads to cleanse the area first
7. Snap plastic clip into hole position on Bonnet Guard (as shown below), over the anti-abrasive tape.

The Bonnet Guard should not come into contact with the vehicle paintwork at any time.

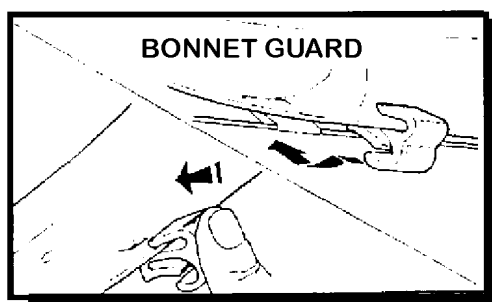

Bonnet adjustment:

After fitment of Bonnet Guard, it is important to check if there is sufficient room between the bonnet and the grille. Close the bonnet slowly to determine if room is sufficient. If doubtful, it is advisable to adjust the bonnet stops to allow more room.

**CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.
NEVER PRESS ON THE BONNET PROTECTOR.**

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.
No authorization by or association with any automobile manufacturer is implied.