

# AIRPLEX INDUSTRIES LIMITED

FIT444

AUTOMOTIVE ACCESSORY MANUFACTURERS

21 SALEYARDS ROAD, OTAHUHU, AUCKLAND, NEW ZEALAND

P.O. BOX 11-286, ELLERSLIE, AUCKLAND, NEW ZEALAND

PHONE 64 (9) 276-9826 - FAX 64 (9) 276-9836


Email info@airplex.co.nz, www.airplex.co.nz




## BONNET GUARD FITTING INSTRUCTIONS: PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION.

### VW AMAROK 2010+ P/N BG516D

1. Open the Bonnet and fit the Bonnet Guard in place ensuring that it is centrally located. Note the holes in the Bonnet Guard lining up with the holes in the Bonnet.
2. Insert the plastic grommet through these holes in the underside of the Bonnet.
3. Firmly fasten using screws provided. As shown in diagram "A"

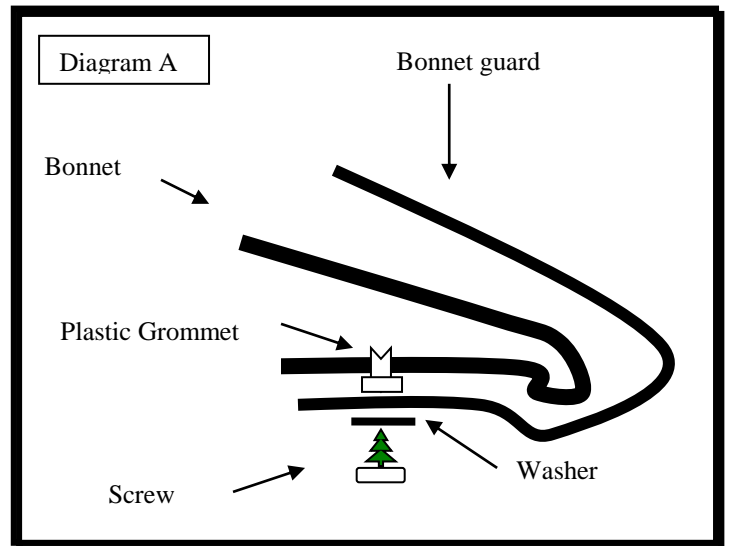

4. Apply the supplied anti-abrasive tape to the edge of the Bonnet where plastic fastening clip secures the Bonnet Guard near the fenders. (cleanse the area with the supplied Alcohol wipes first)
5. Snap the plastic clips into hole positions on Bonnet Guard, over the anti-abrasive tape. As shown in diagram "B"

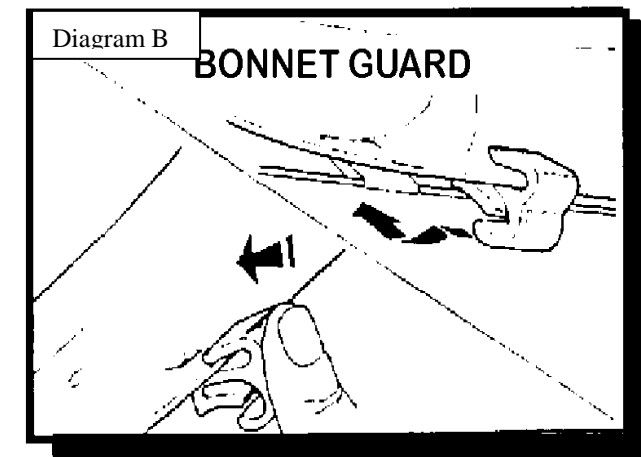

**CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.  
NEVER PRESS ON THE BONNET GUARD.**

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.  
No authorization by or association with any automobile manufacturer is implied.