

AIRPLEX INDUSTRIES LIMITED
AUTOMOTIVE ACCESSORY MANUFACTURERS
21 SALEYARDS ROAD, OTAHUHU, AUCKLAND, NEW ZEALAND
P.O. BOX 11-286, ELLERSLIE, AUCKLAND, NEW ZEALAND
PHONE 64 (9) 276-9826 - FAX 64 (9) 276-9836
Email info@airplex.co.nz, www.airplex.co.nz

FIT521




BONNET GUARD FITTING INSTRUCTIONS:


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION.

VW CADDY 09+ p/n BG531DW

1. Clean and open bonnet.
2. Trial fit the Bonnet Guard and note the 4 pre-drilled holes in the Bonnet Guard that correspond with the holes in the underside of bonnet.
3. Fit Bonnet Guard in position, and fasten securely with supplied screw plastic base. Note sequence as per diagram as below.

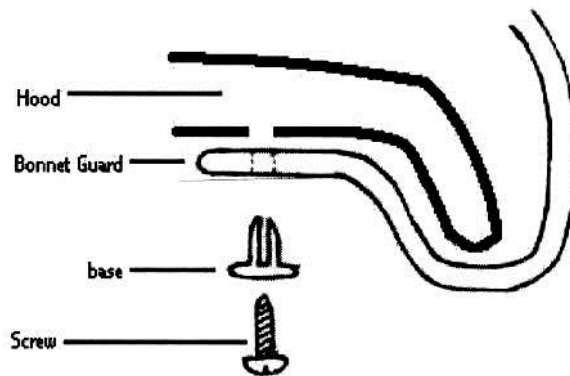

4. Apply the anti-abrasive tape on edge of hood where plastic fastening clip secures the Bonnet Guard near the fenders. Use the supplied alcohol prep-pads to cleanse the area first.
5. Snap 2 supplied plastic "W" clip into hole position on Bonnet Guard as shown, over the anti-abrasive tape.

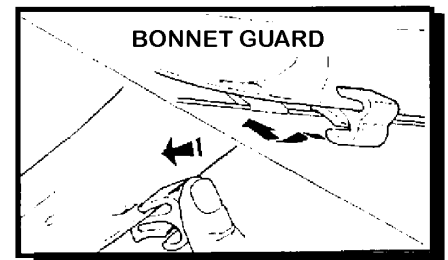

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.
No authorisation by or association with any automobile manufacturer is implied.



**CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.
NEVER PRESS ON THE BONNET GUARD.**