


Mountain Top Roll with Tailgate hook
Installation Instructions

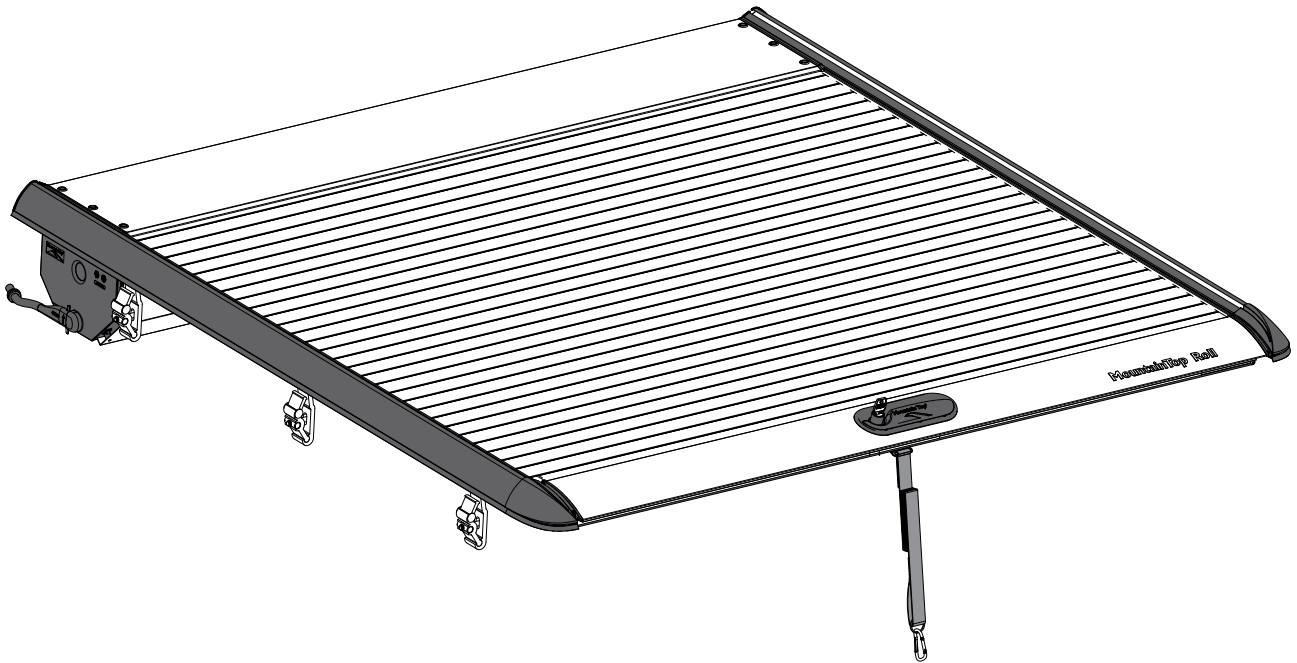

Model Year:	Volkswagen	2010 T/D:
Part Number:	MTR VW80 L01	Double cab
	MTRA VW80 L51	Double cab



Weight: 31 / 36 kg.



Installation Time: 2 hr.
























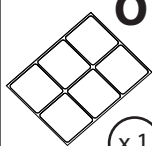
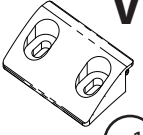

Video Installation intruction



<http://youtu.be/2yM2hbplCdg>

Mountain Top Roll with Tailgate hook
Installation Instructions

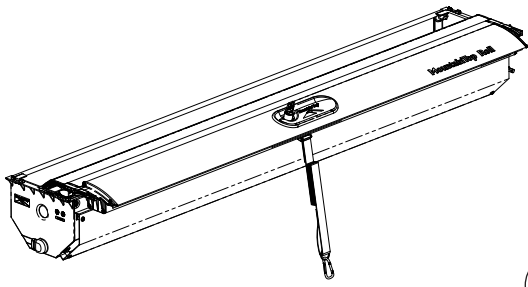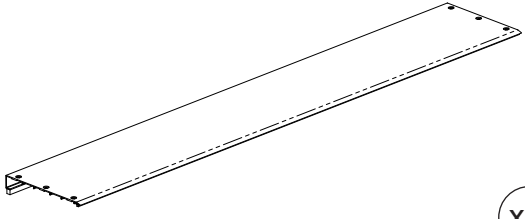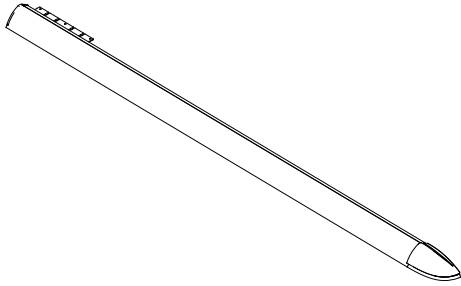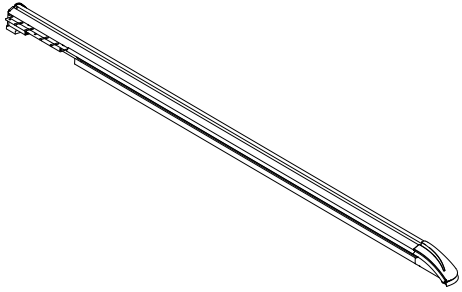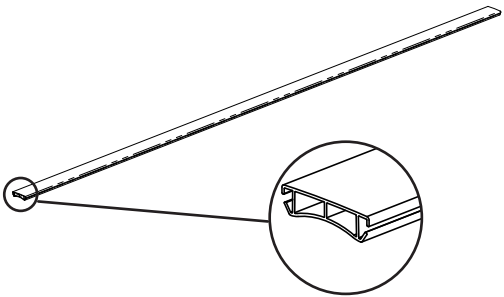




 <p>A</p> <p>x 1</p>	 <p>B</p> <p>x 1</p>					
 <p>C</p> <p>x 1</p>	 <p>D</p> <p>x 1</p>					
 <p>E</p> <p>x 1</p>						
 <p>Kit</p>	 <p>Q</p> <p>x 6</p>	 <p>R</p> <p>x 6</p>	 <p>S</p> <p>x 6</p>	 <p>P</p> <p>x 12</p>	 <p>V</p> <p>x 6</p>	 <p>T</p> <p>Ø6</p> <p>x 6</p>
 <p>Installation Manual</p> <p>x 1</p>	 <p>U</p> <p>M8x35</p> <p>x 6</p>	 <p>I</p> <p>M6x12</p> <p>x 4</p>	 <p>M</p> <p>x 6</p>	 <p>L</p> <p>M5x6</p> <p>x 6</p>	 <p>K</p> <p>x 6</p>	 <p>G</p> <p>x 4</p>
 <p>TUV</p> <p>x 1</p>	 <p>H</p> <p>400mm</p> <p>x 2</p>	 <p>J</p> <p>x 2</p>	 <p>N</p> <p>x 2</p>	 <p>O</p> <p>x 1</p>	 <p>V</p> <p>x 1</p>	 <p>W</p> <p>x 2</p>

Mountain Top Roll with Tailgate hook
Installation Instructions




	 Ø3,5mm Ø6mm	 Ø15-30mm	 Rust protection Rostschutzmittel Anti-rouille Anti roest	
 PZ2 5mm T15, T30	 H ₂ O	 1-25Nm PZ2 8, 10mm T15, T30		

Mountain Top Roll with Tailgate hook
Installation Instructions

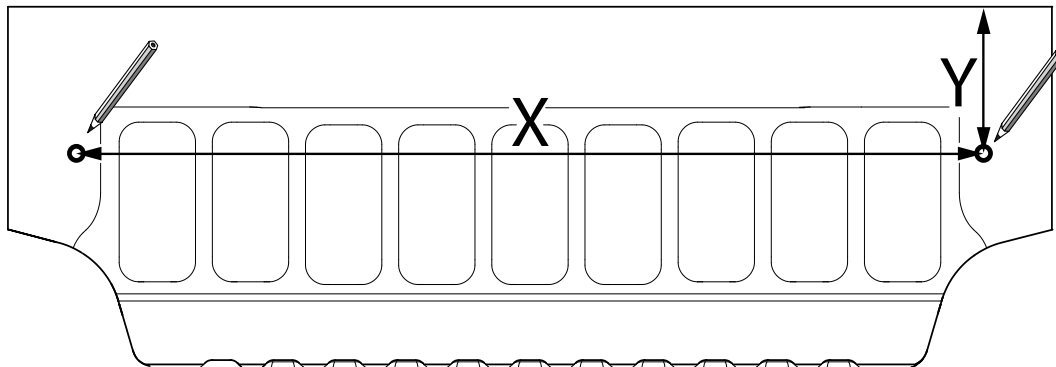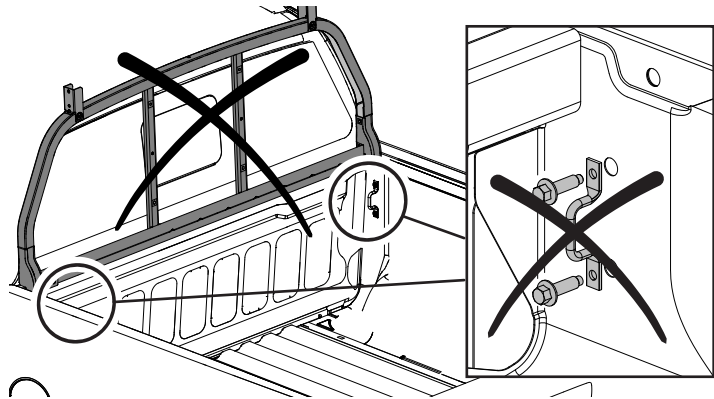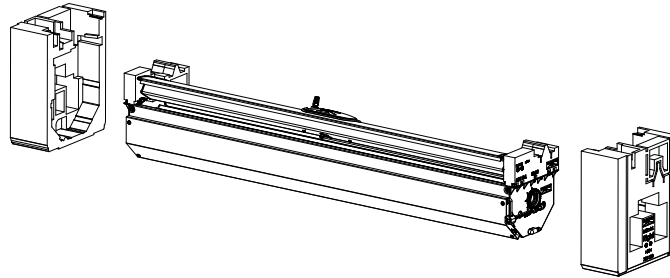

Plain bed		
	X	Y
VW	1505	170


Mountain Top Roll with Tailgate hook
Installation Instructions

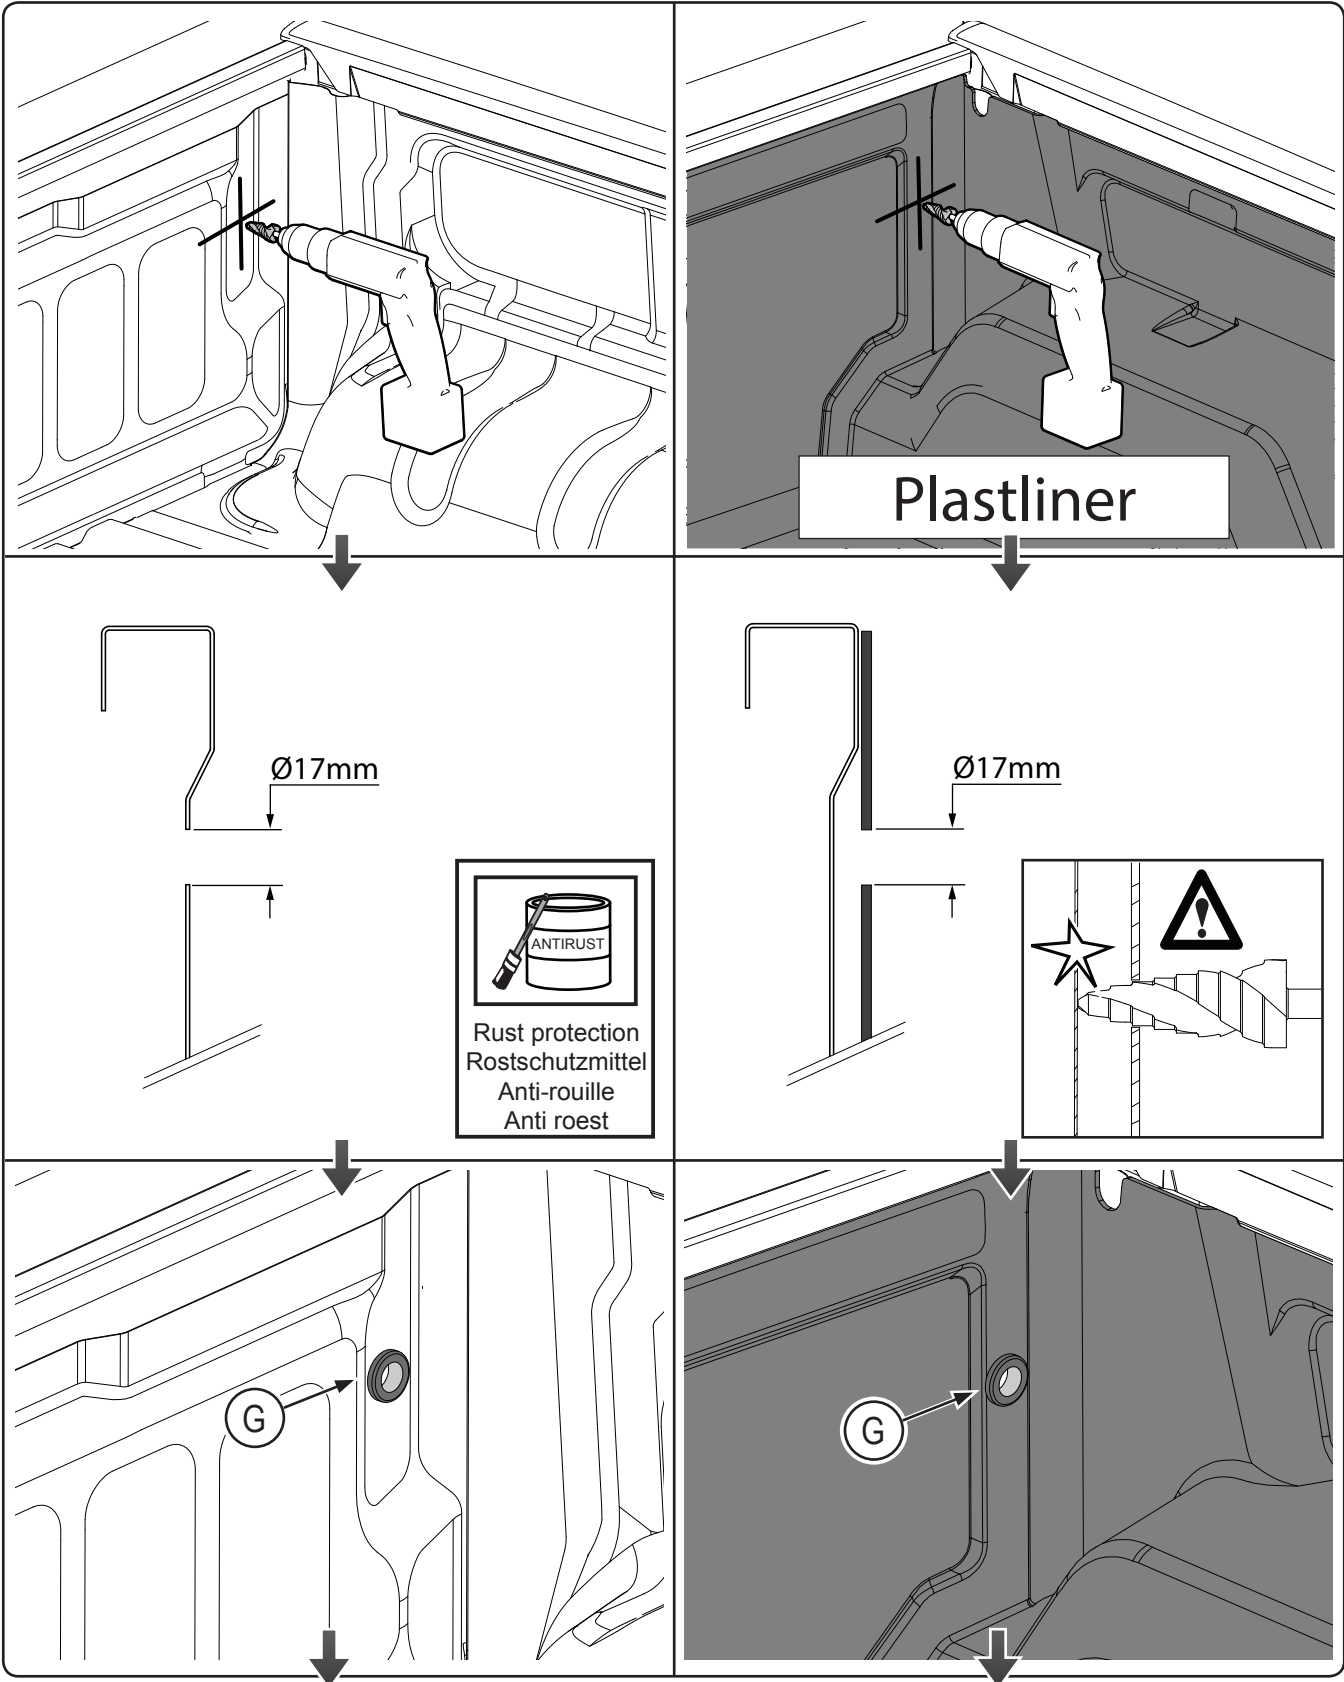


Mountain Top Roll with Tailgate hook
Installation Instructions




Mountain Top Roll with Tailgate hook
Installation Instructions

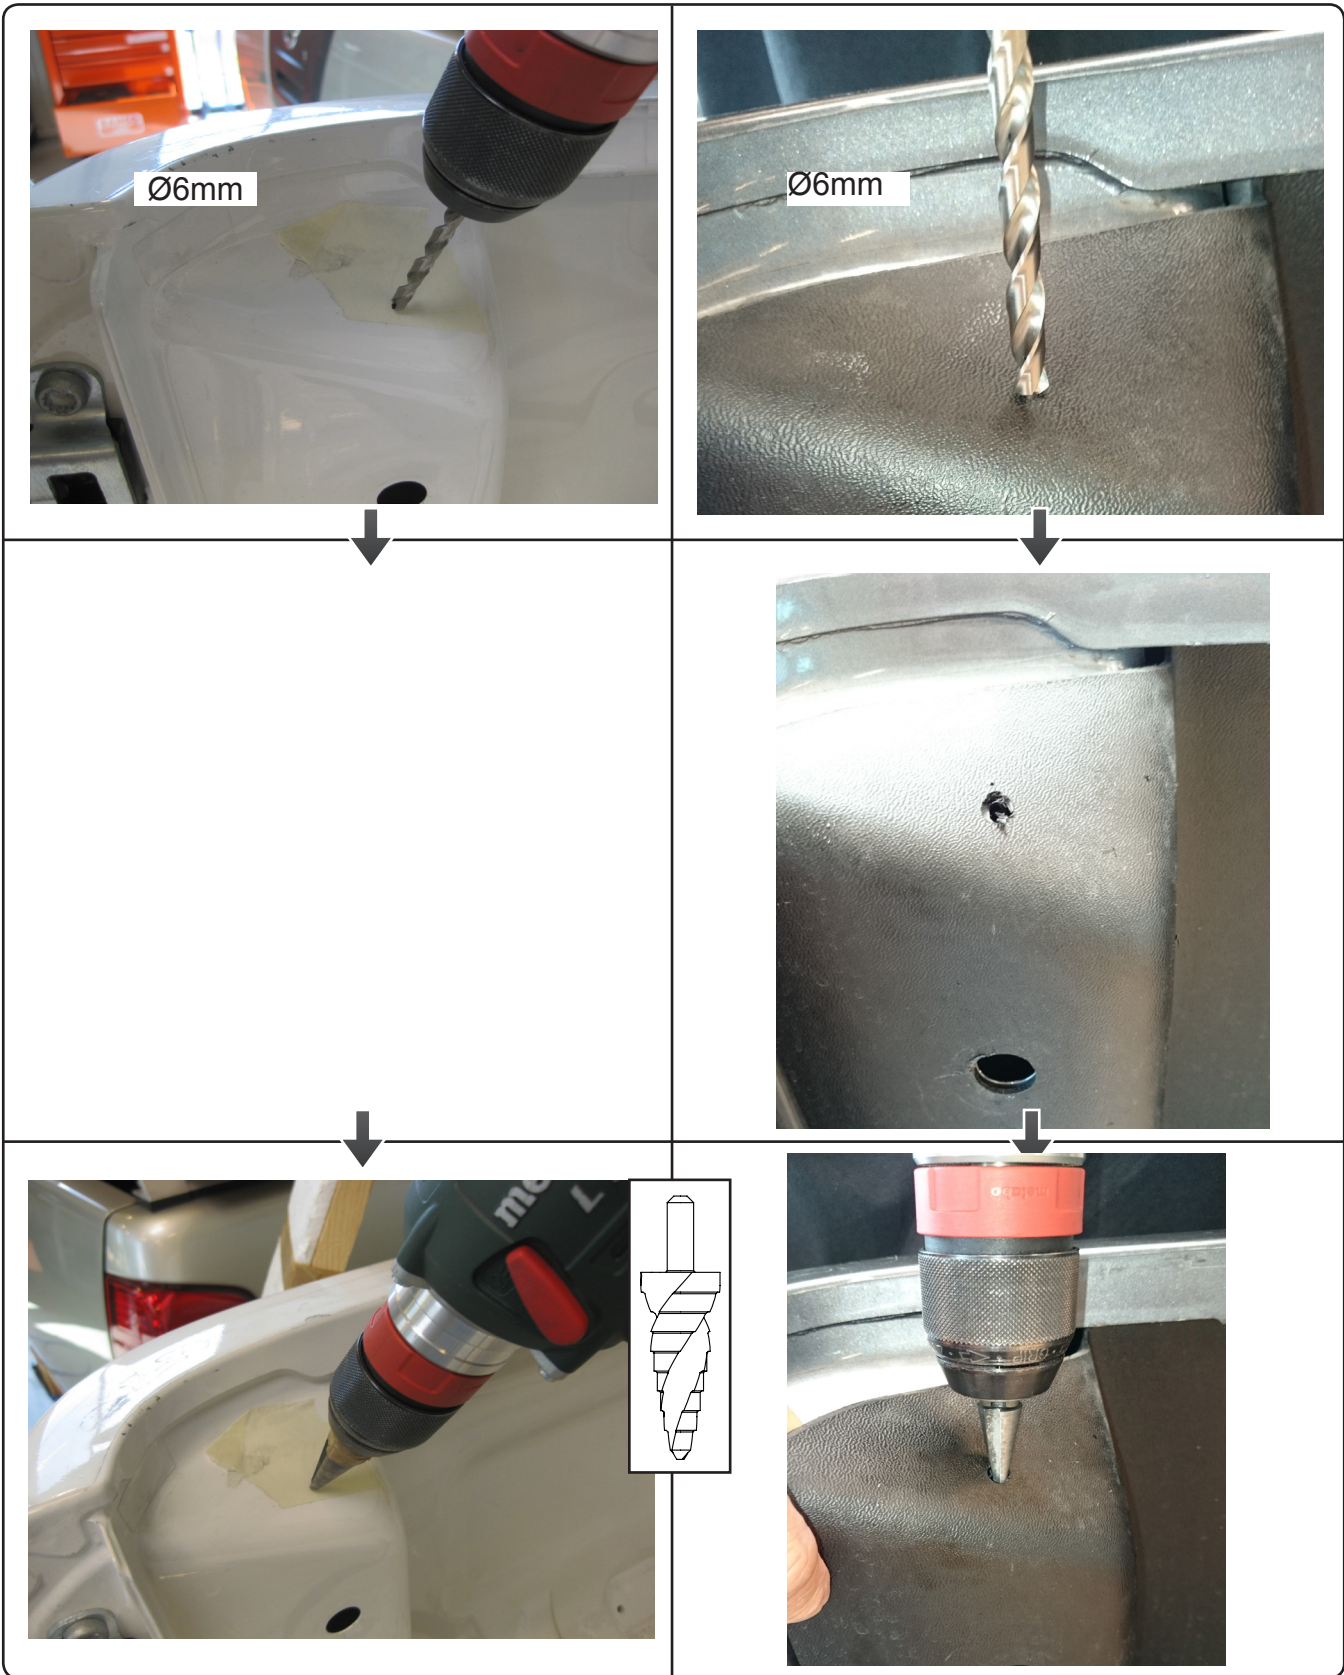


Mountain Top Roll with Tailgate hook
Installation Instructions

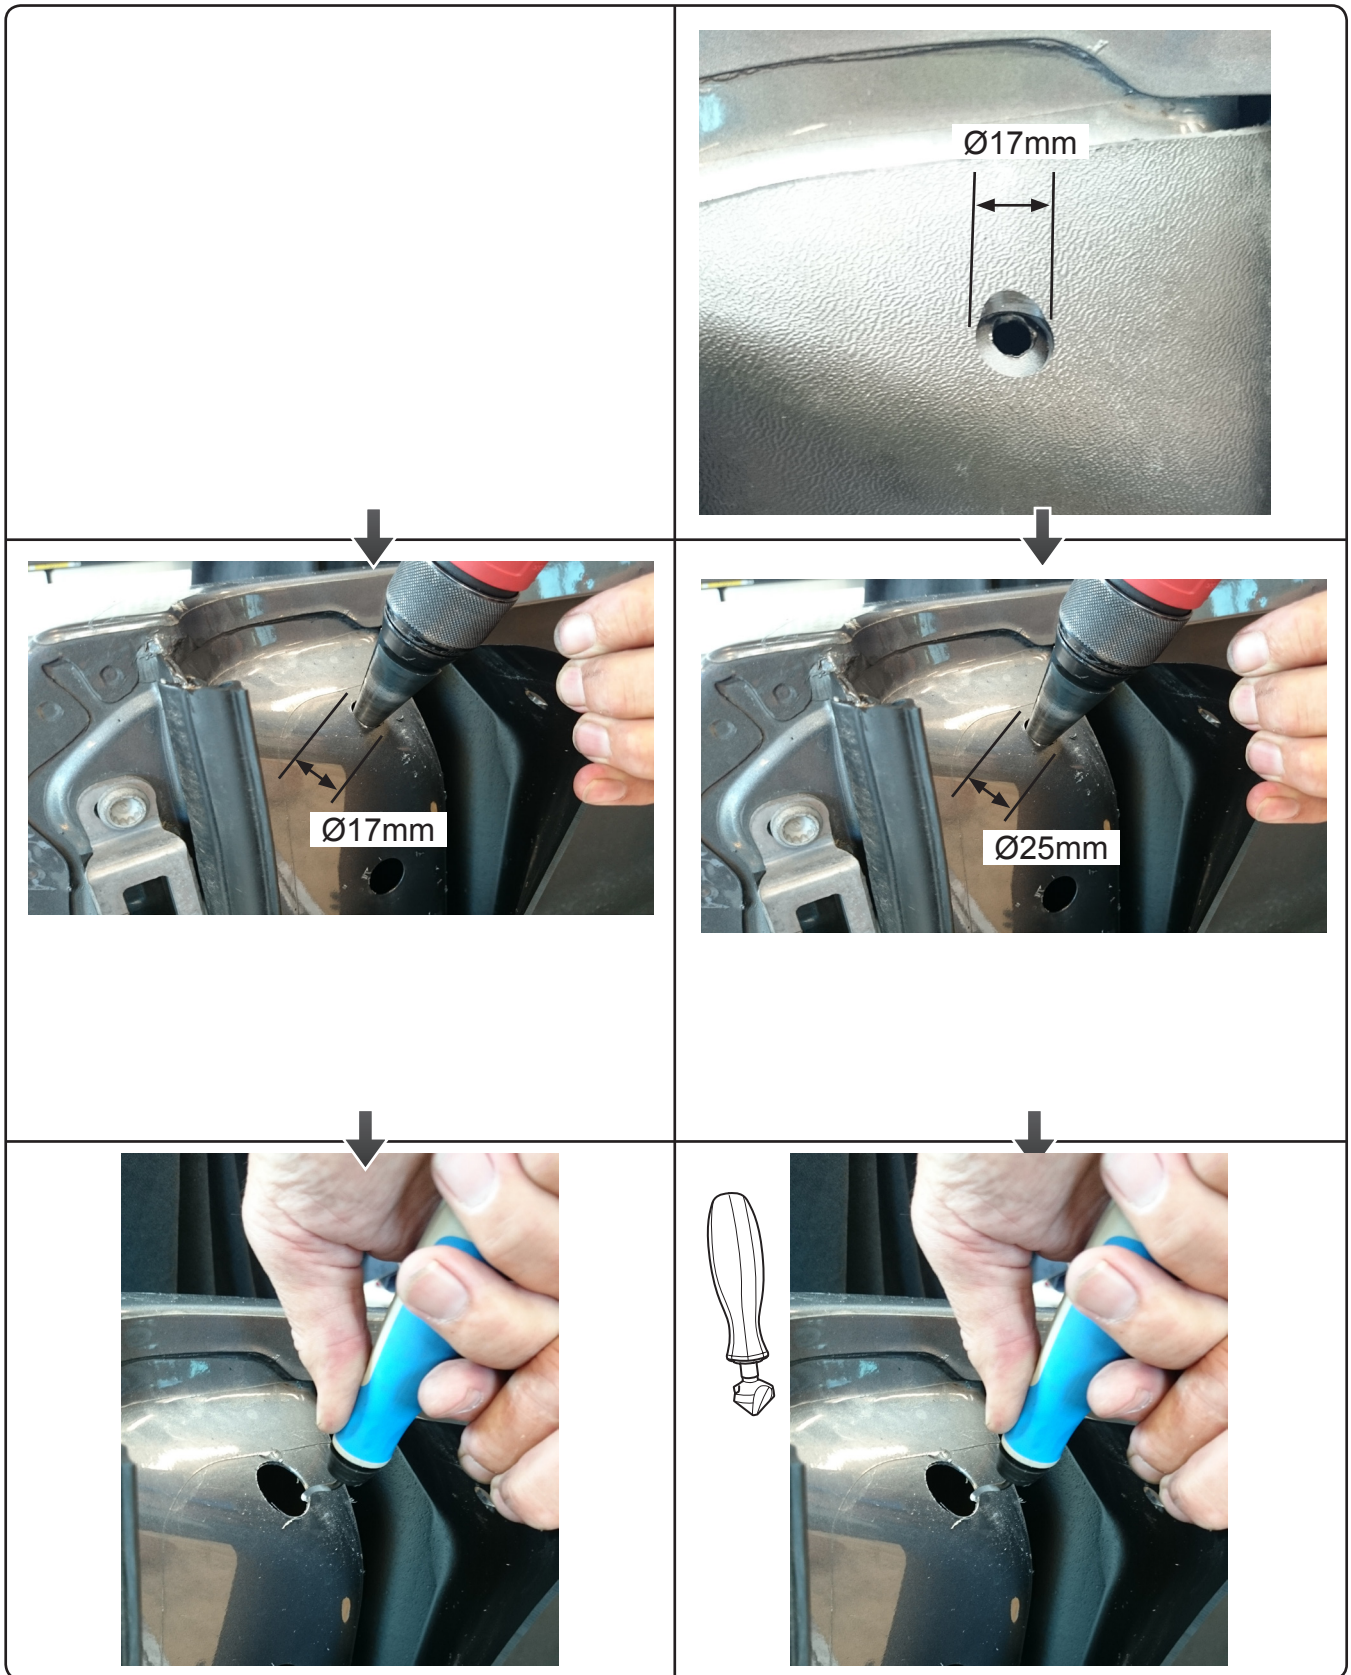


Mountain Top Roll with Tailgate hook
Installation Instructions



Rust protection
Rostschutzmittel
Anti-rouille
Anti roest

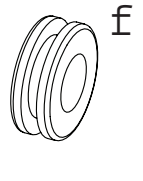

f


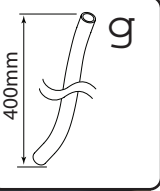


g
400mm




Mountain Top Roll with Tailgate hook Installation Instructions





Mountain Top Roll with Tailgate hook
Installation Instructions

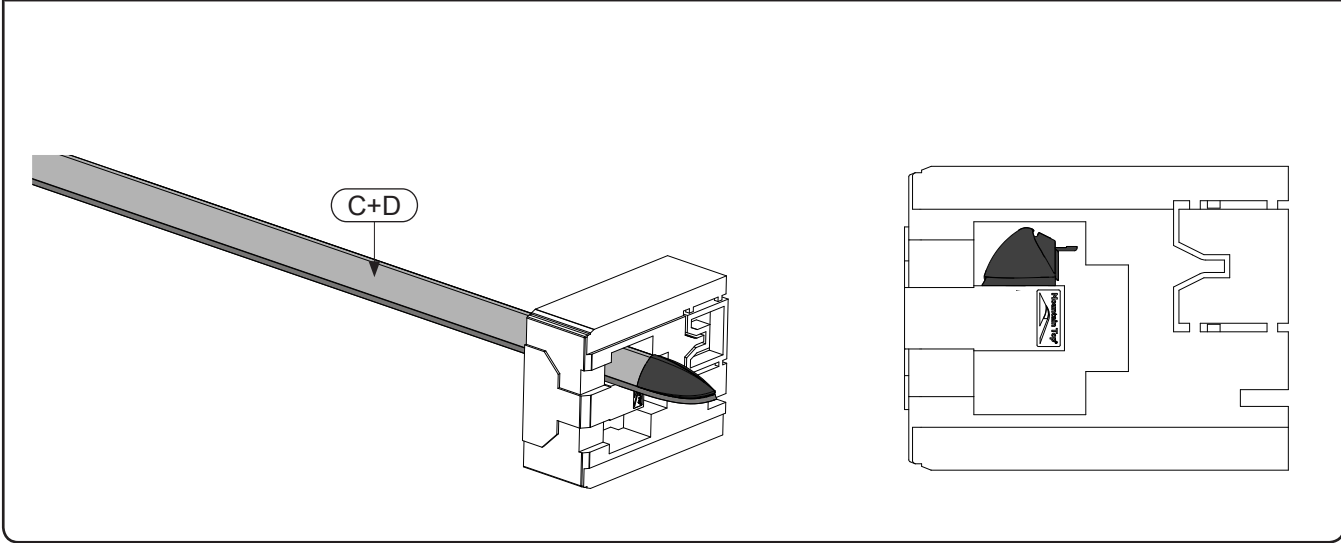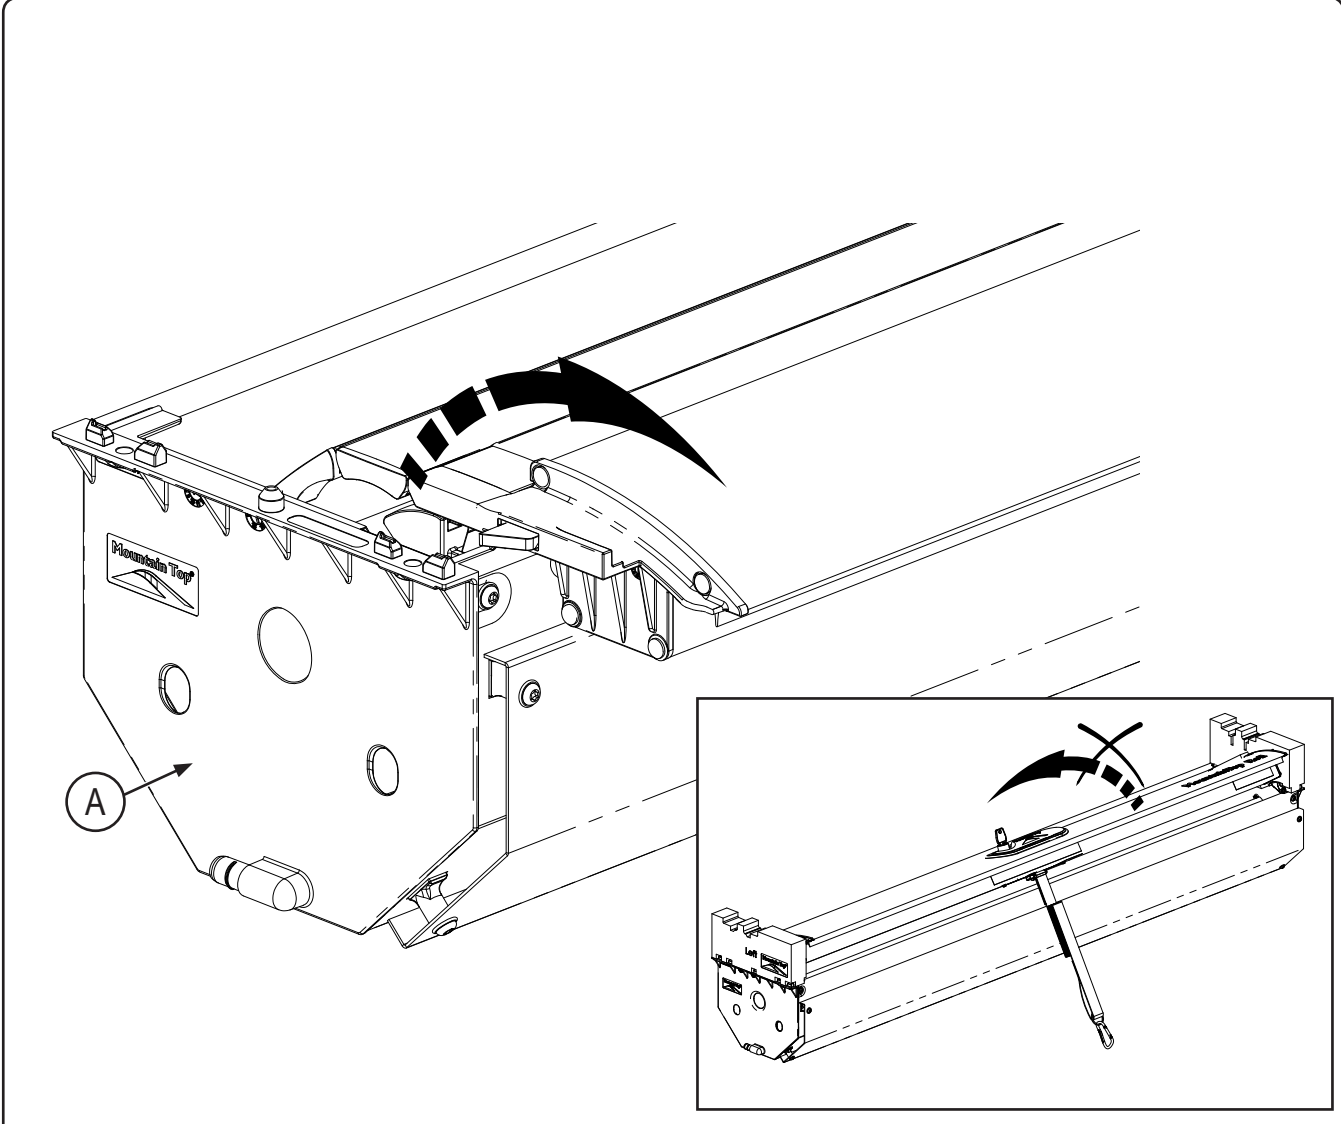


Mountain Top Roll with Tailgate hook
Installation Instructions

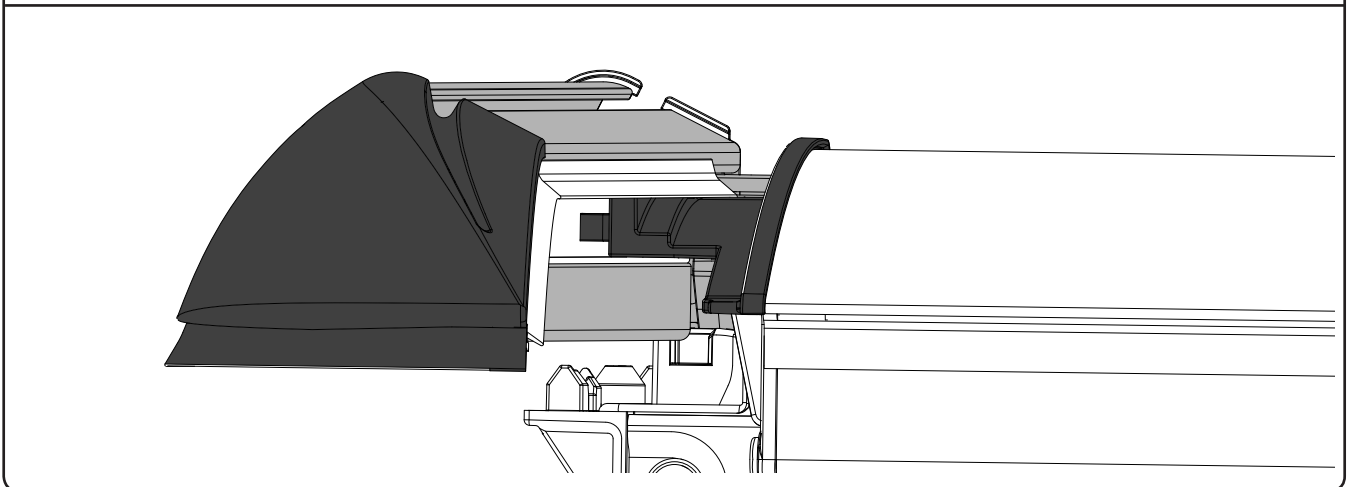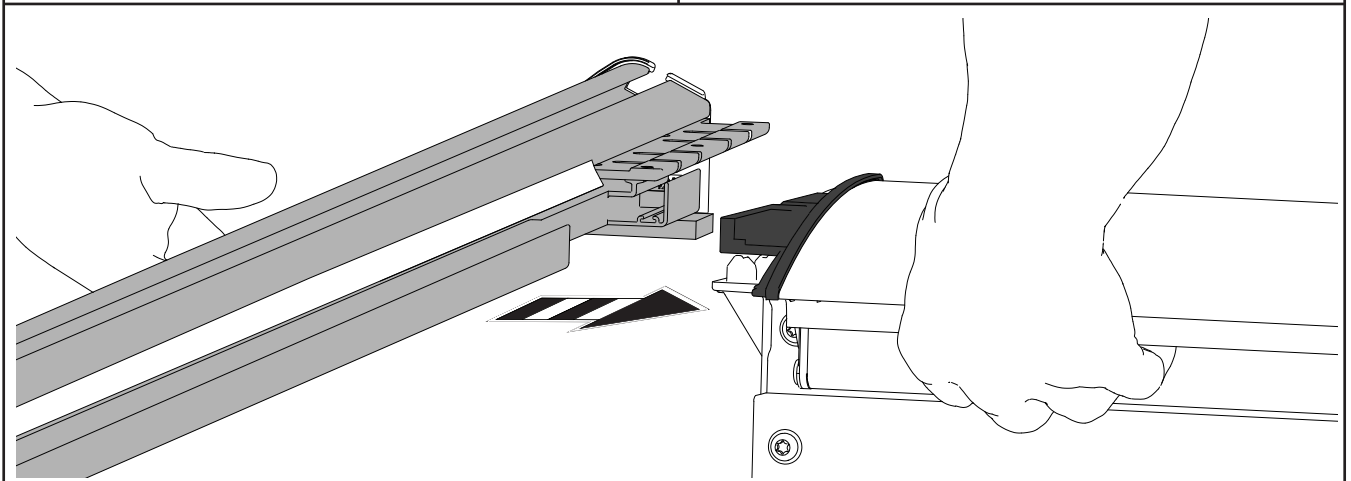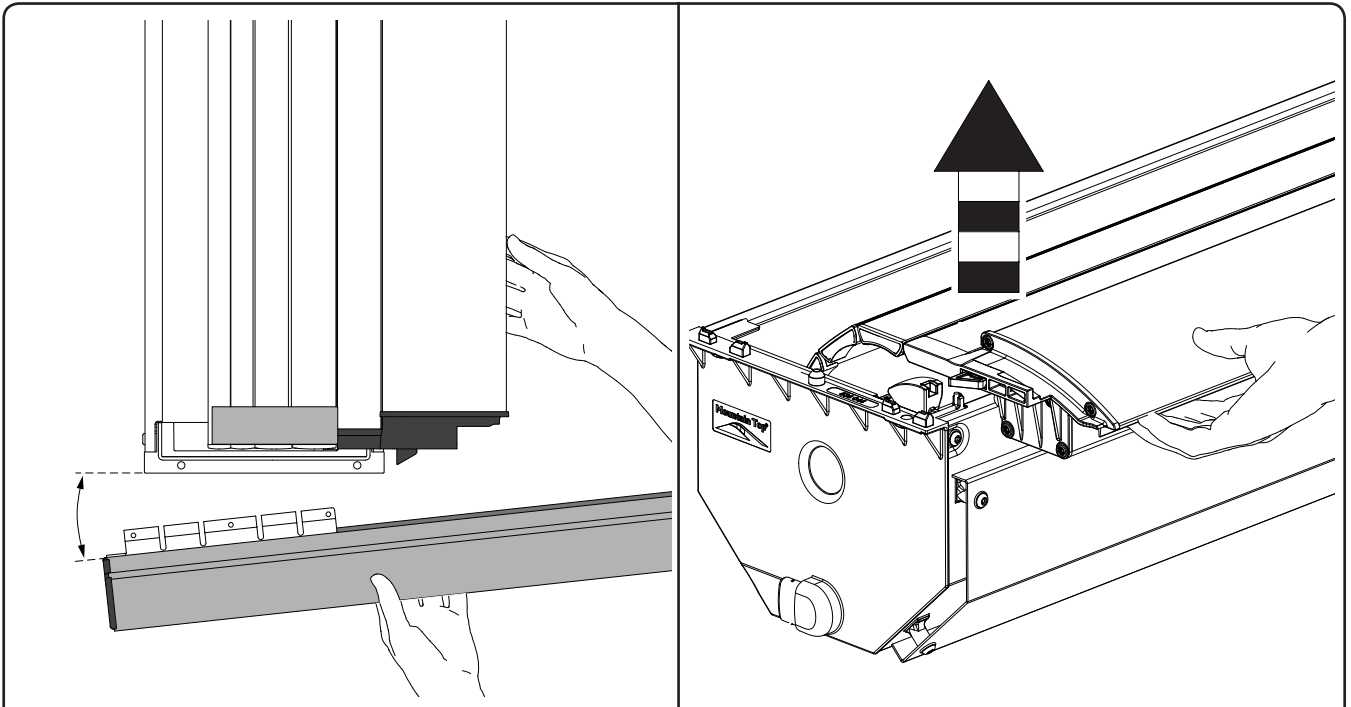


Mountain Top Roll with Tailgate hook
Installation Instructions

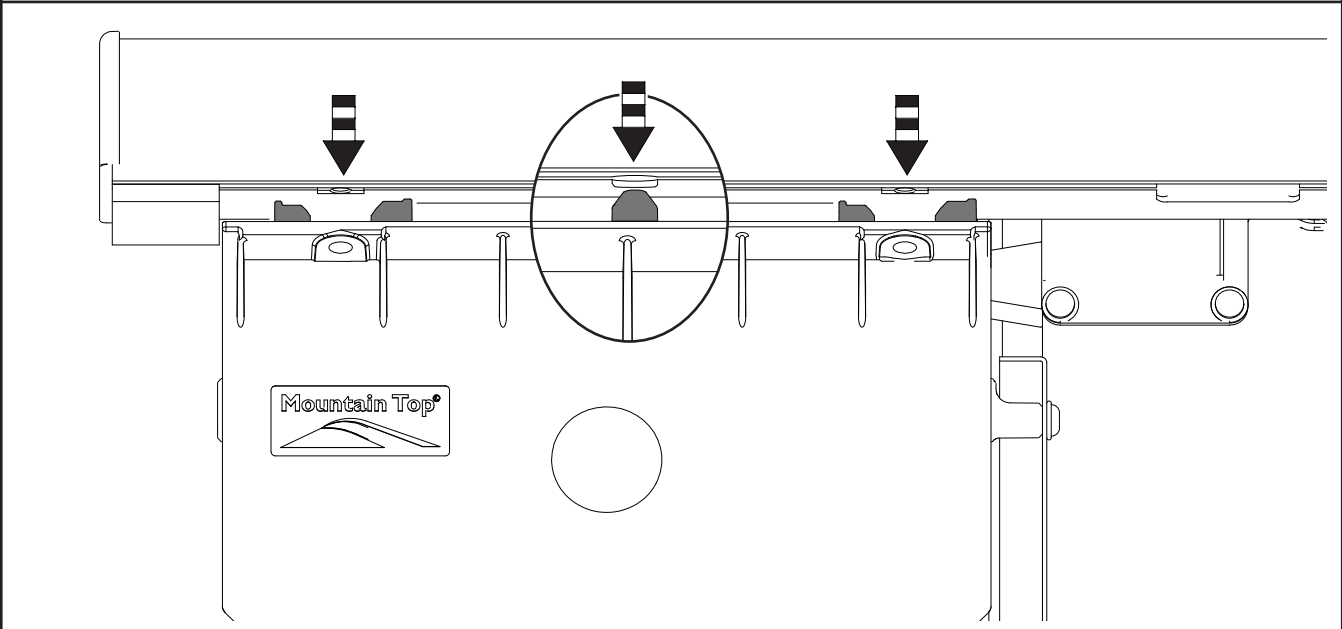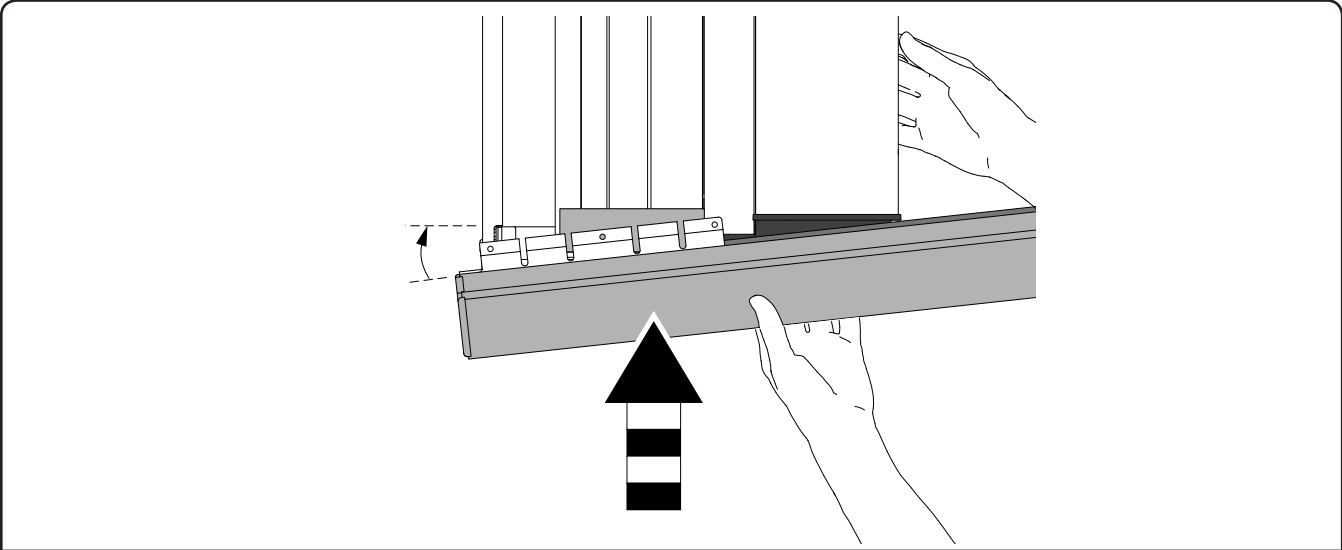


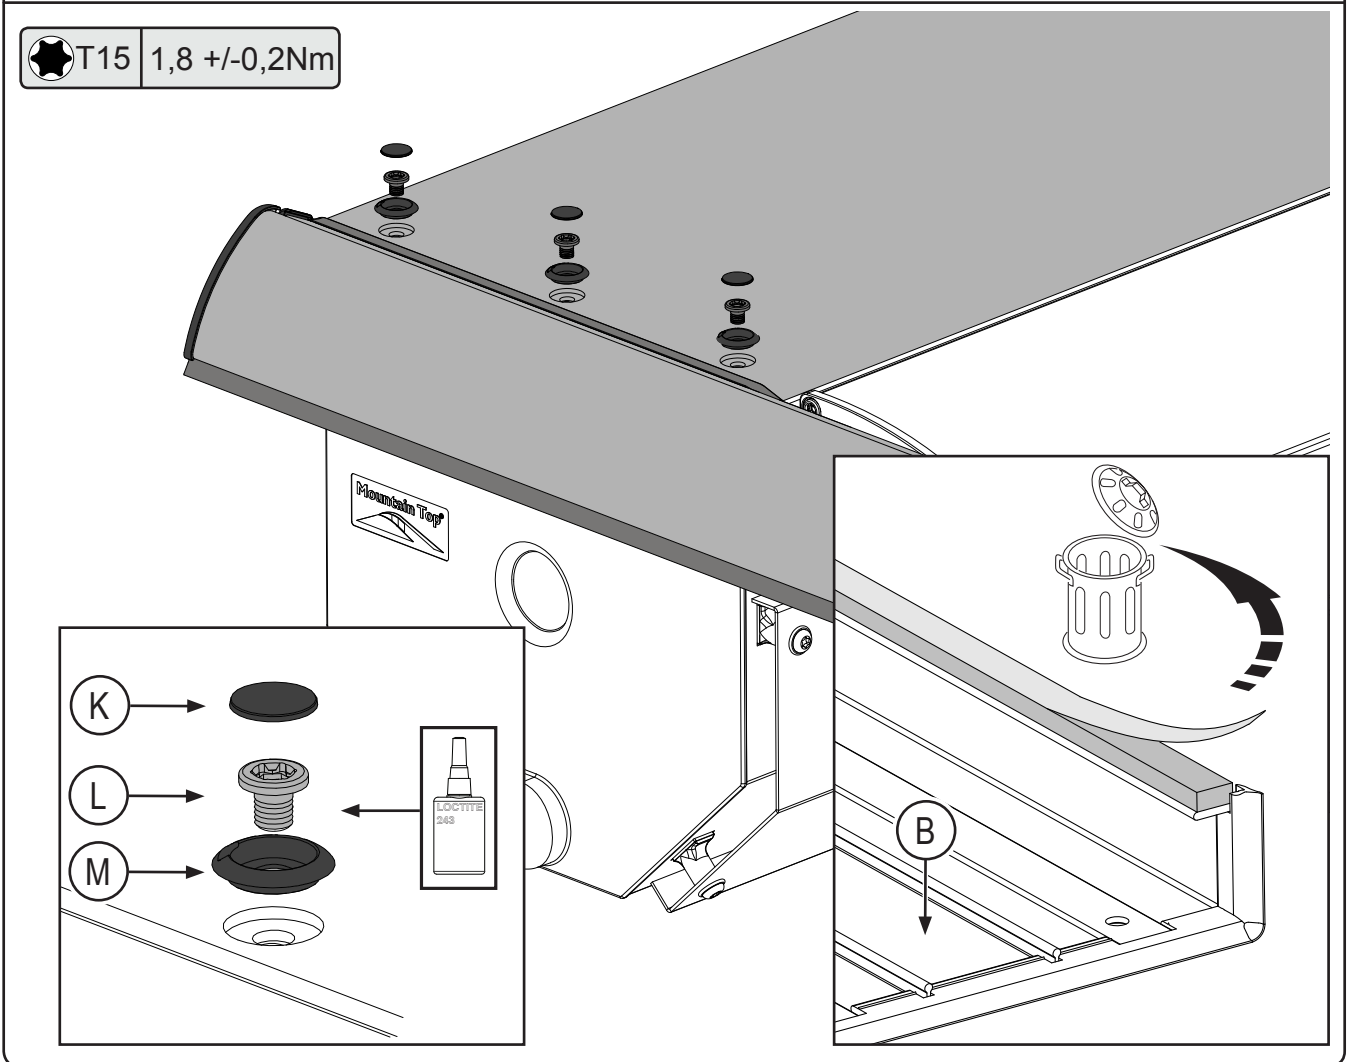
 T30 4,8 +/-1Nm

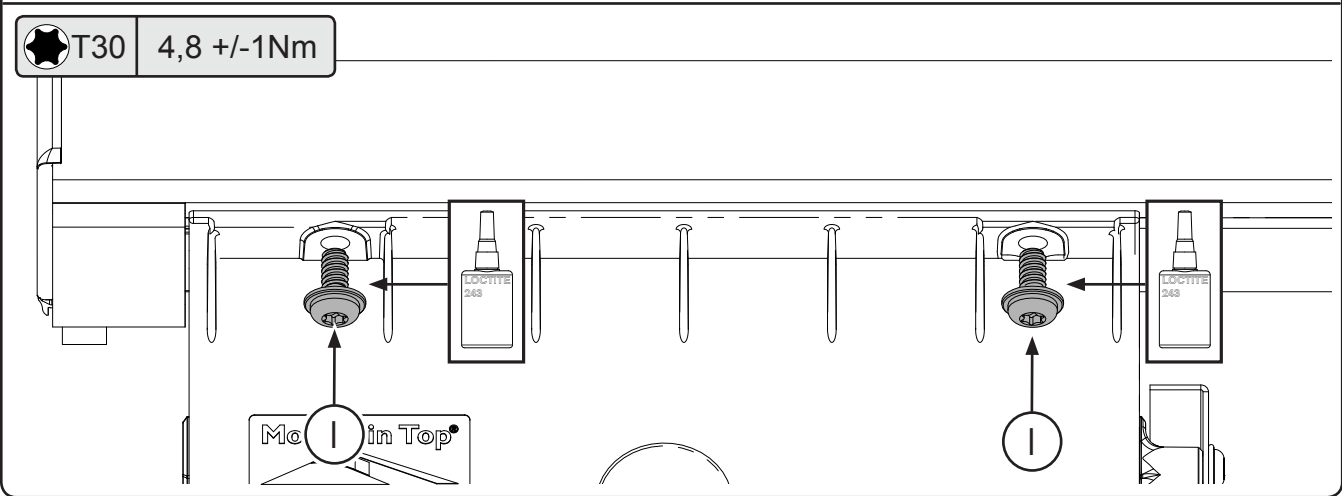


Mountain Top Roll with Tailgate hook
Installation Instructions

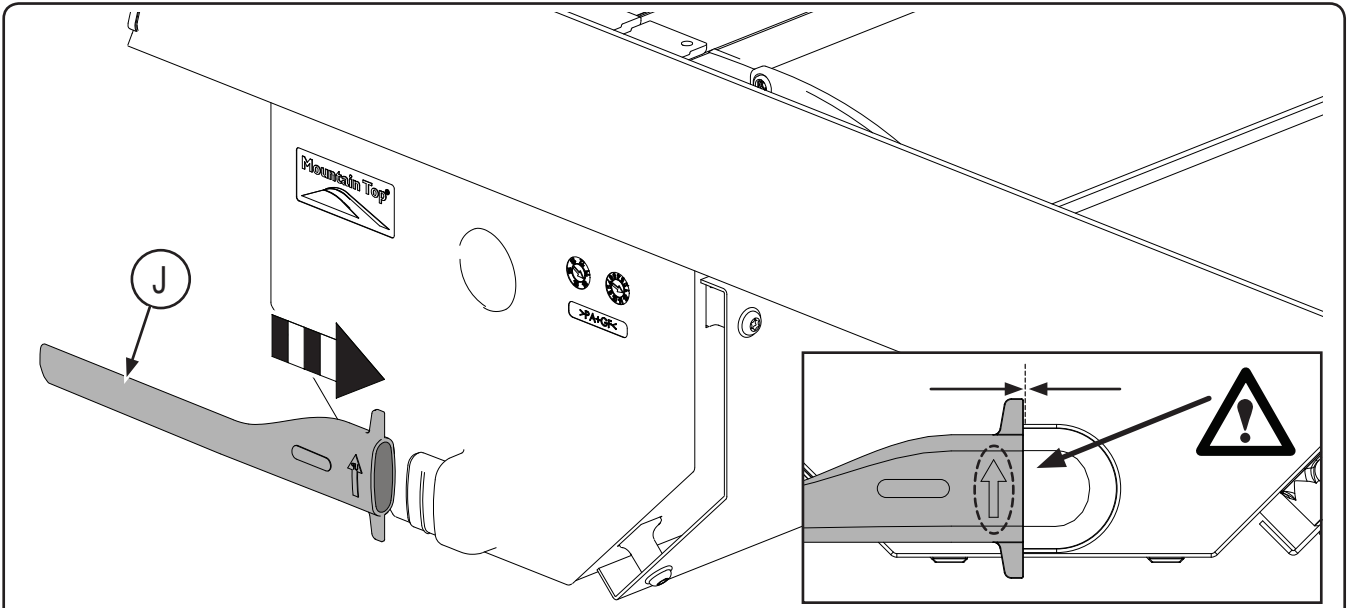




 T15 1,8 +/-0,2Nm




Mountain Top Roll with Tailgate hook
Installation Instructions

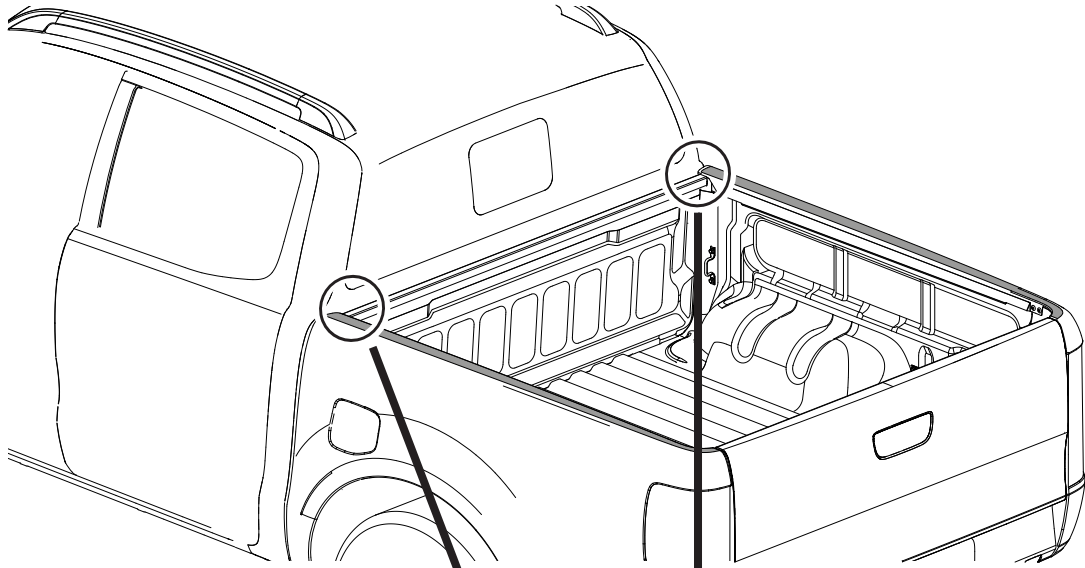




Mountain Top Roll with Tailgate hook
Installation Instructions

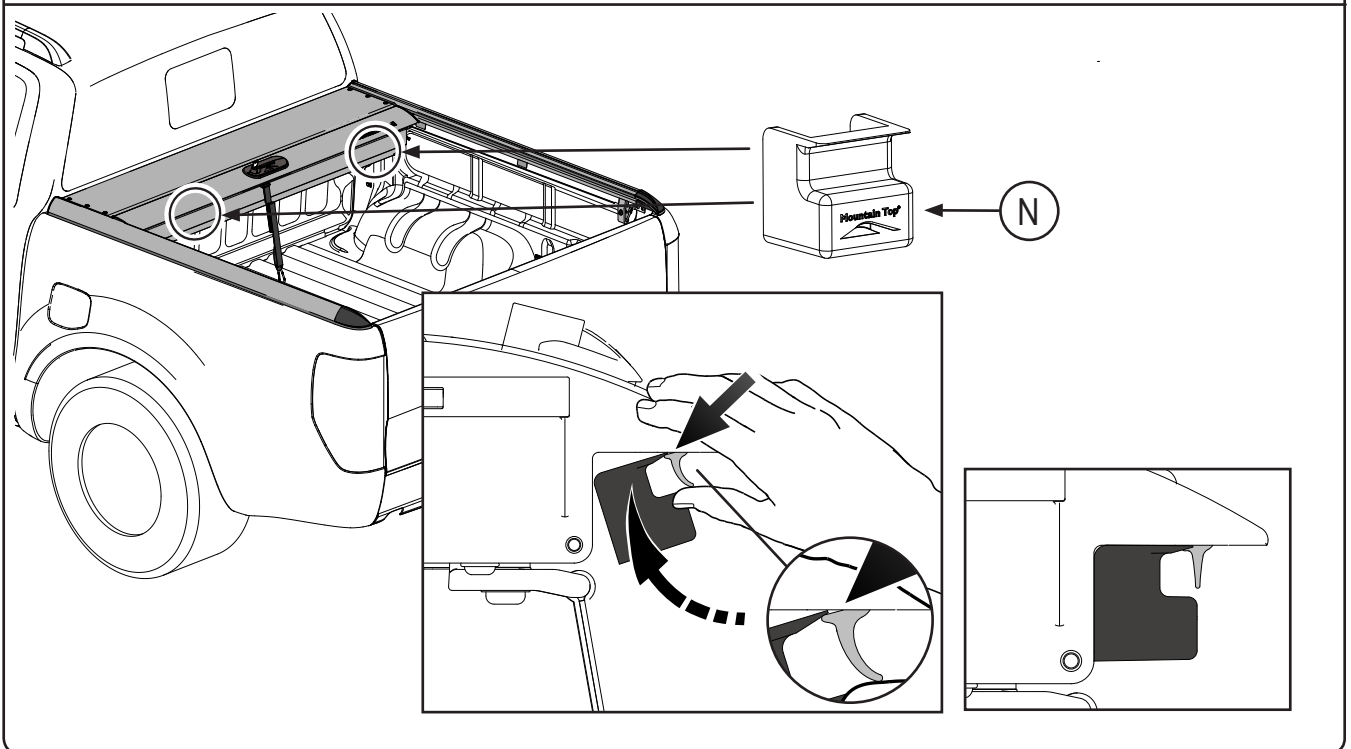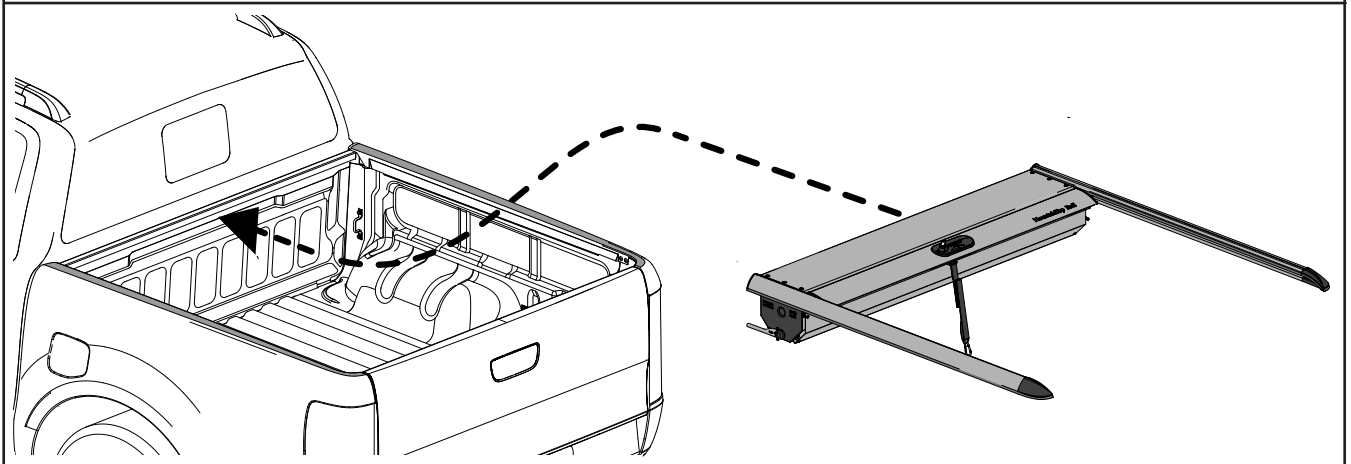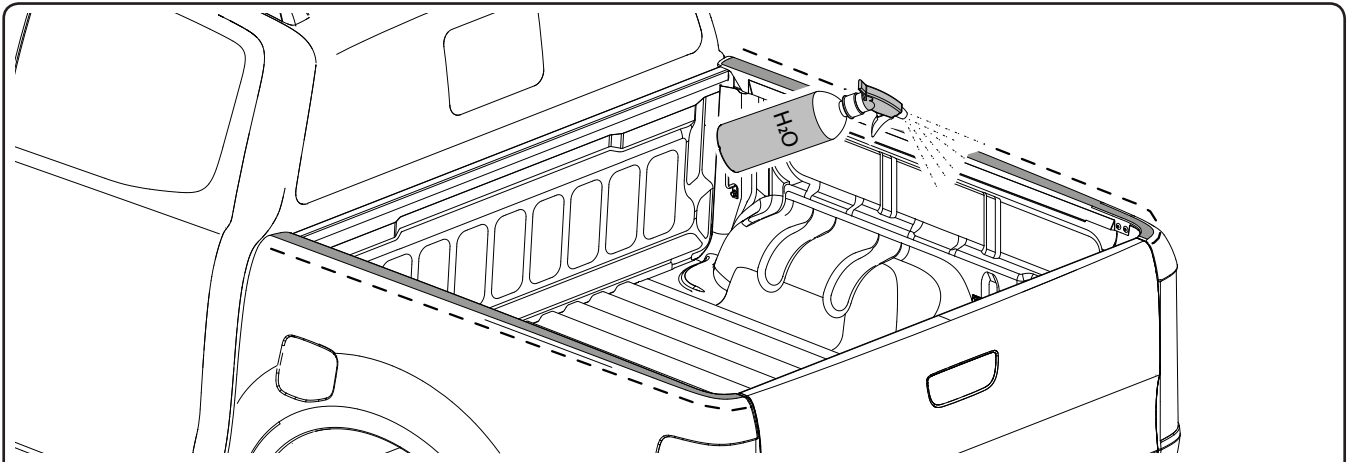



Mountain Top Roll with Tailgate hook
Installation Instructions

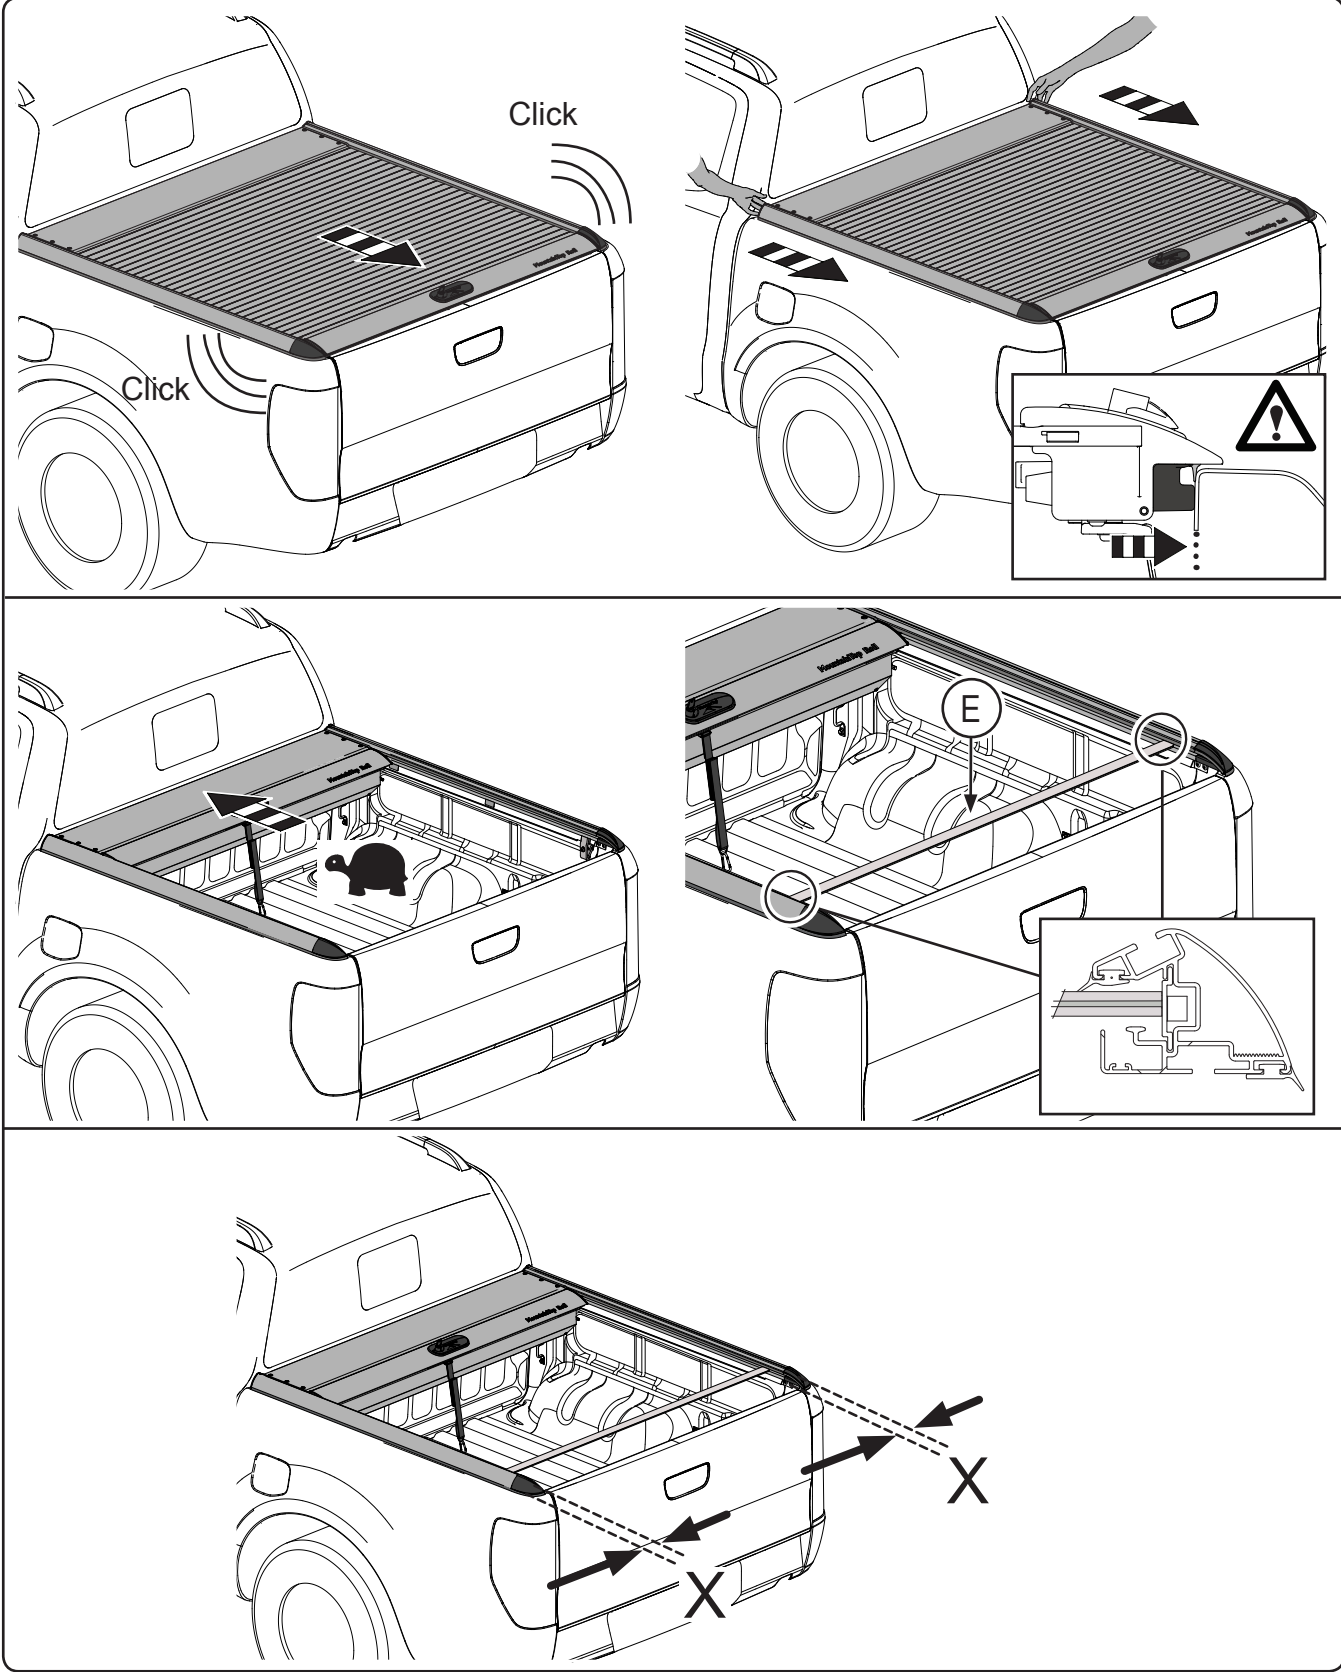


Mountain Top Roll with Tailgate hook
Installation Instructions

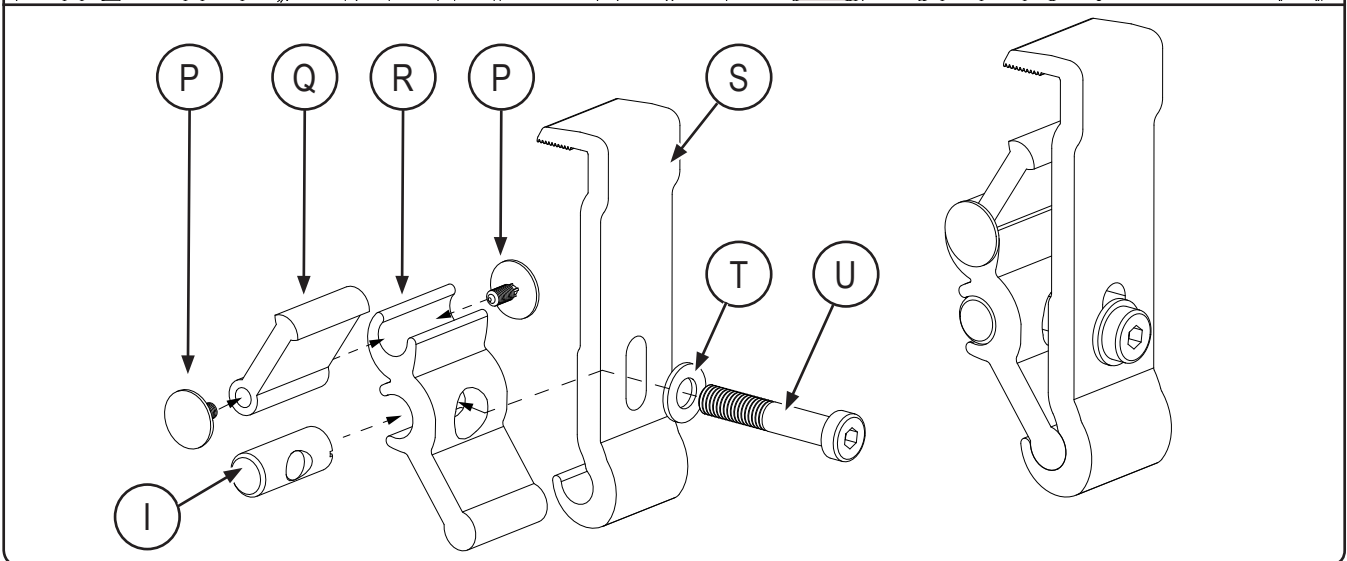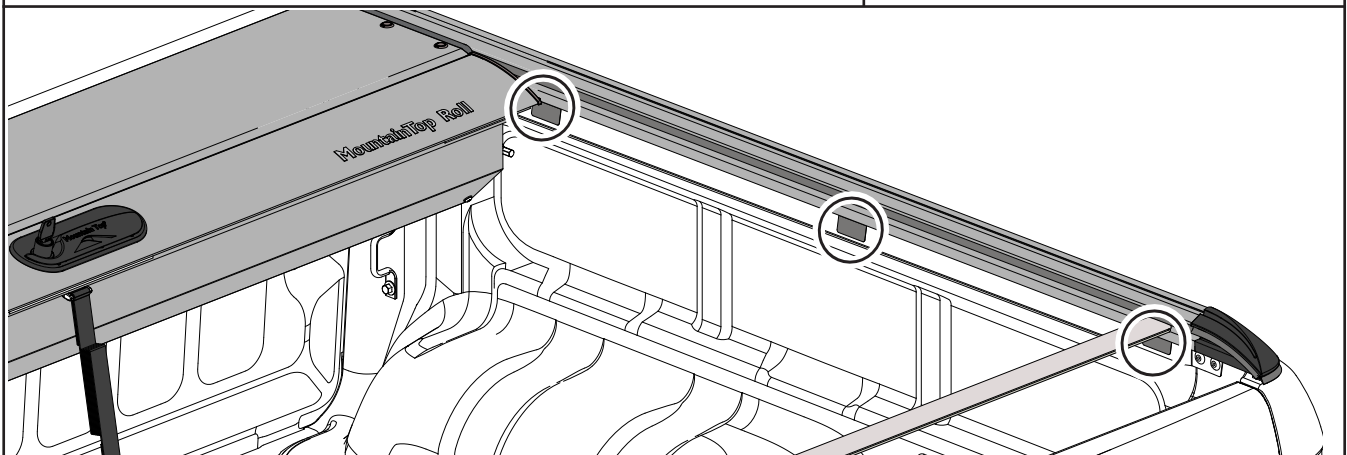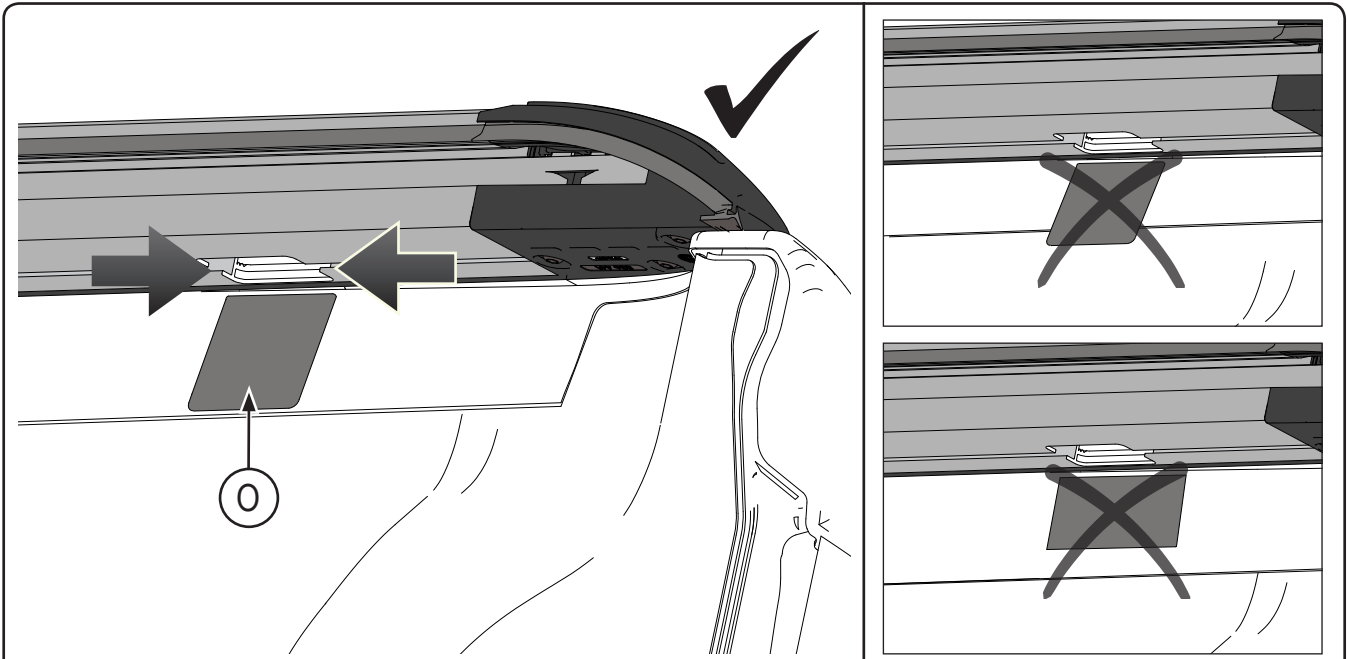




Mountain Top Roll with Tailgate hook
Installation Instructions

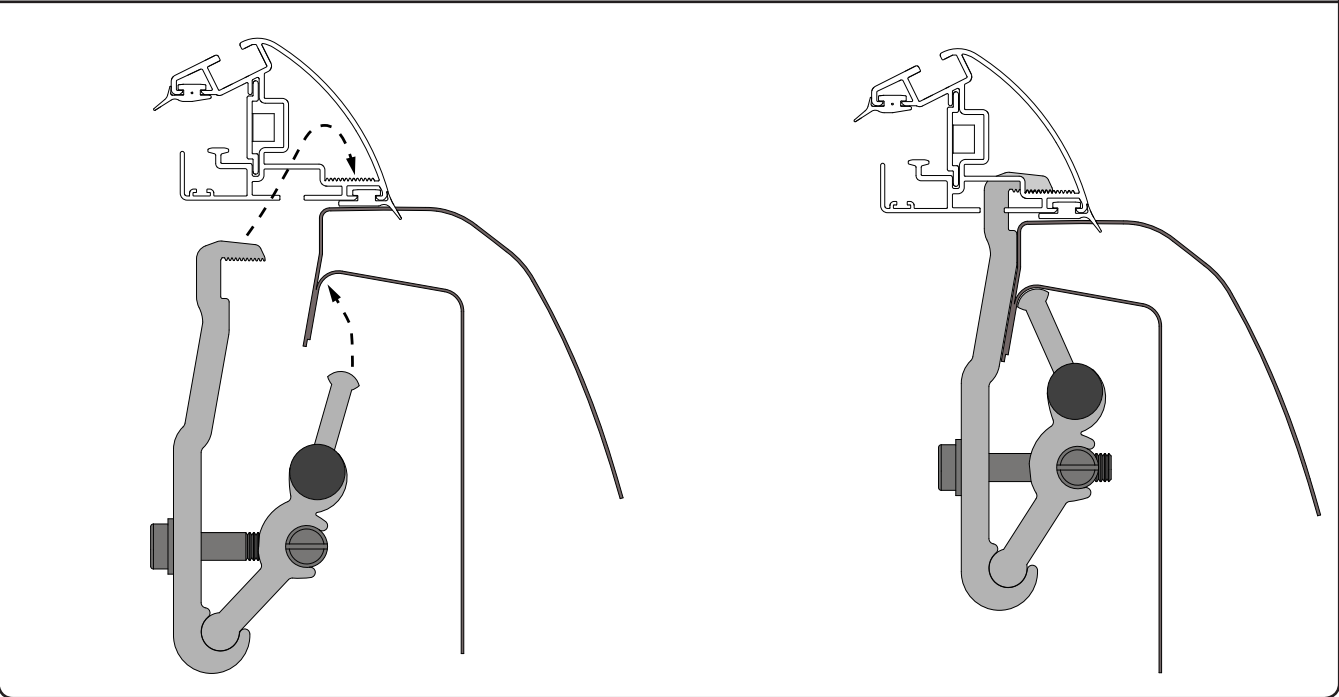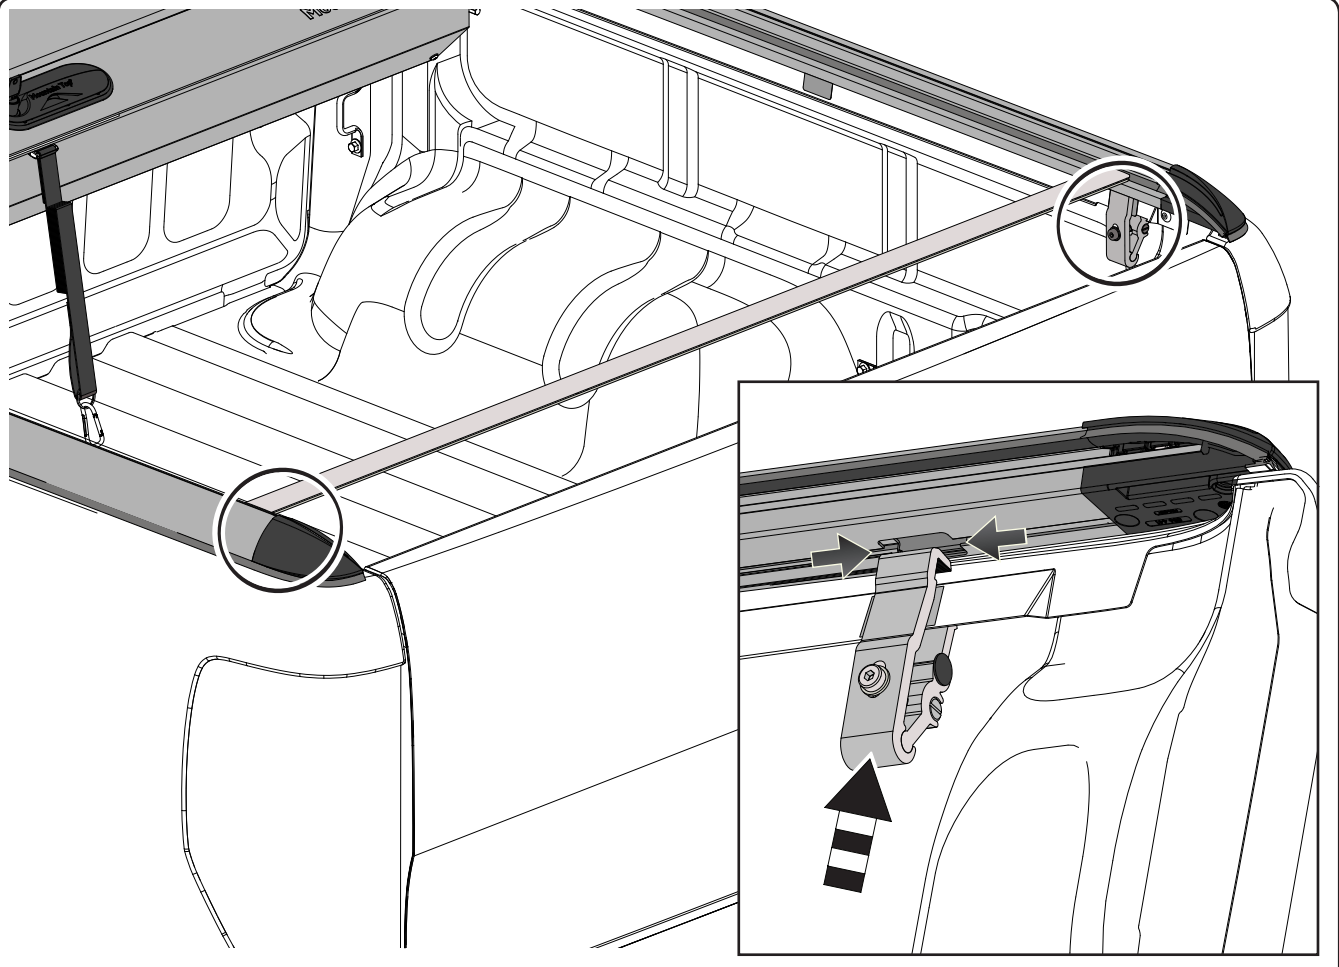



Mountain Top Roll with Tailgate hook
Installation Instructions

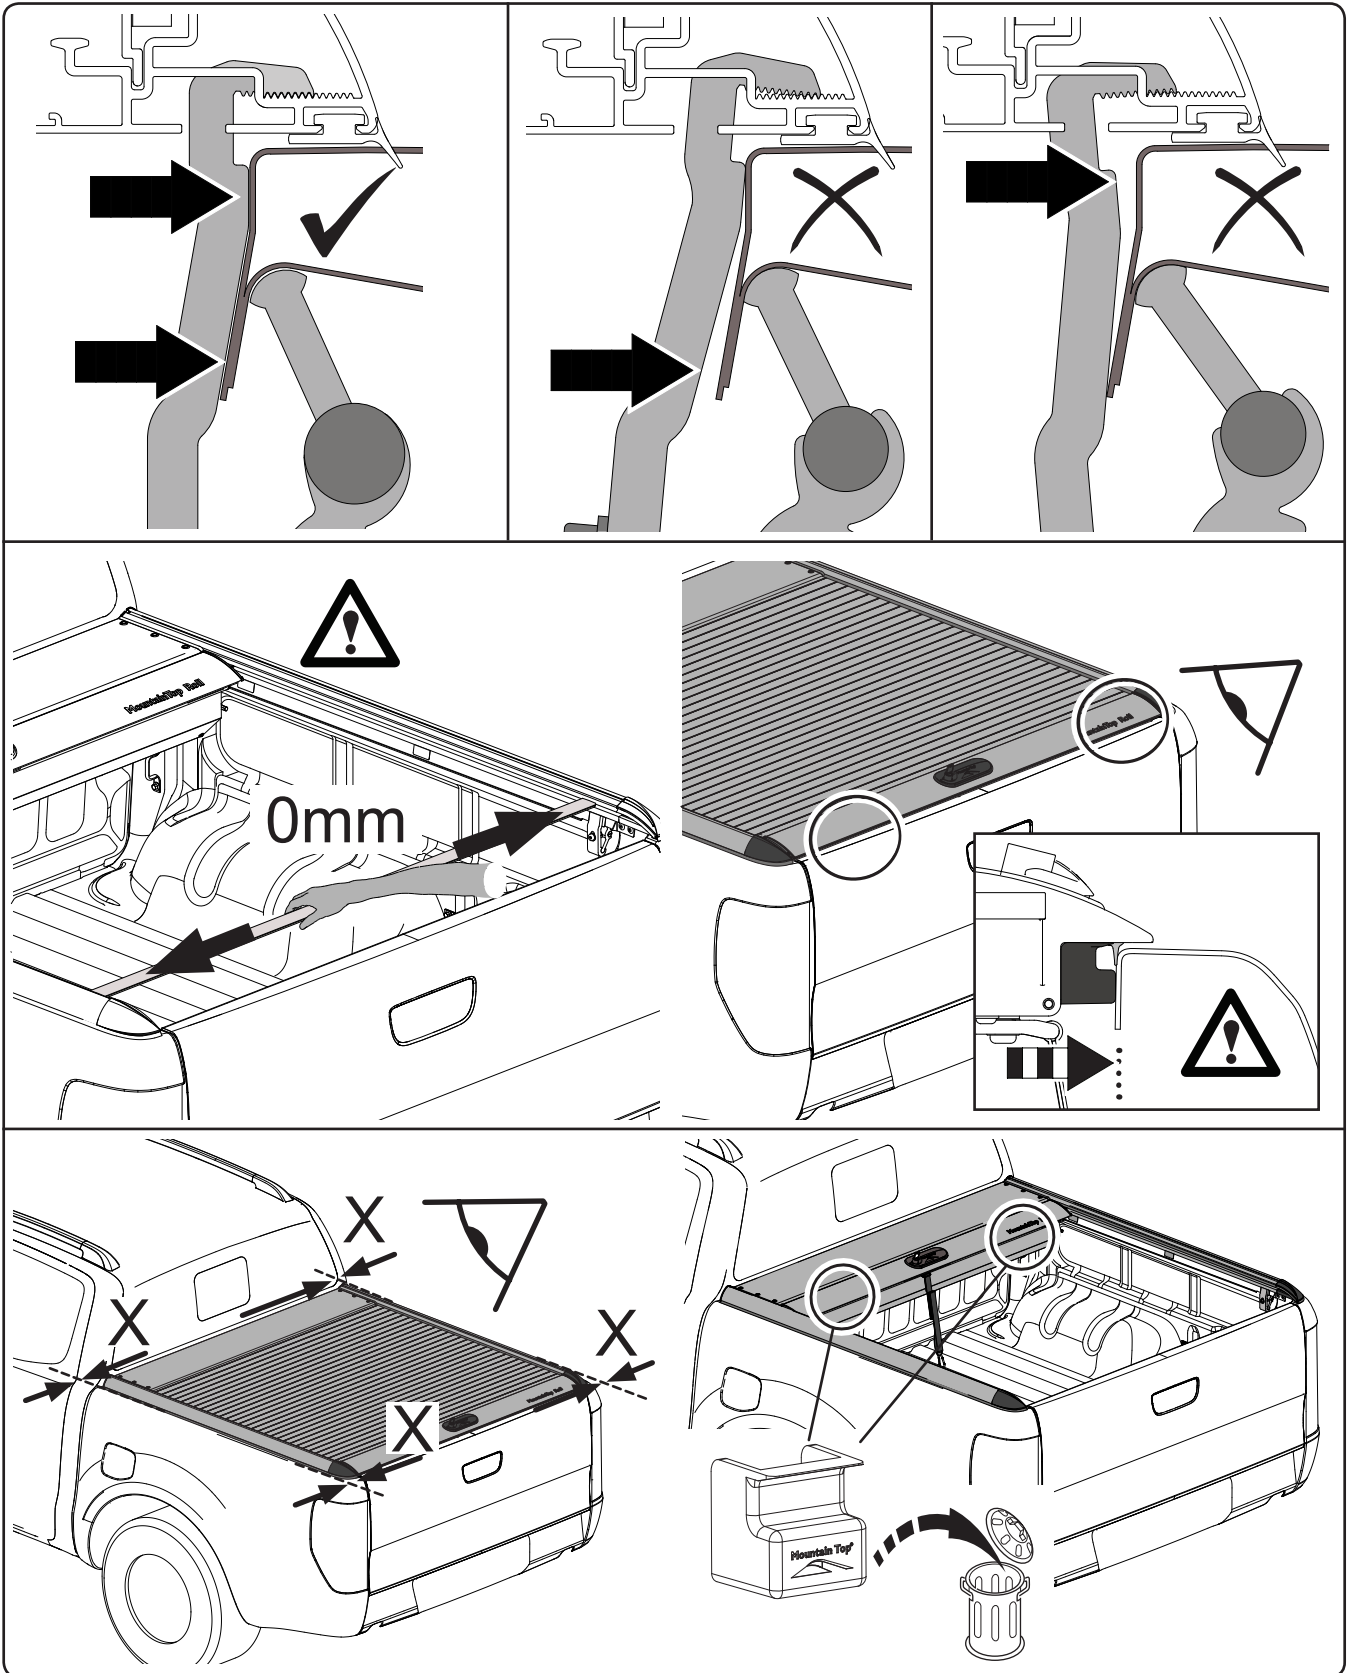



Mountain Top Roll with Tailgate hook
Installation Instructions

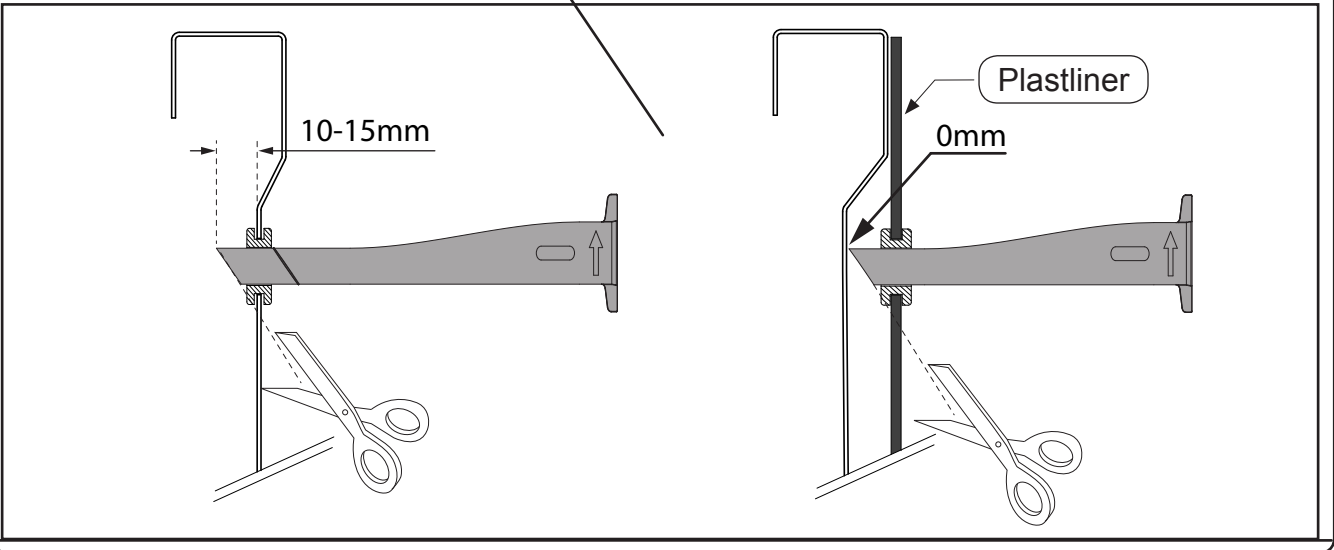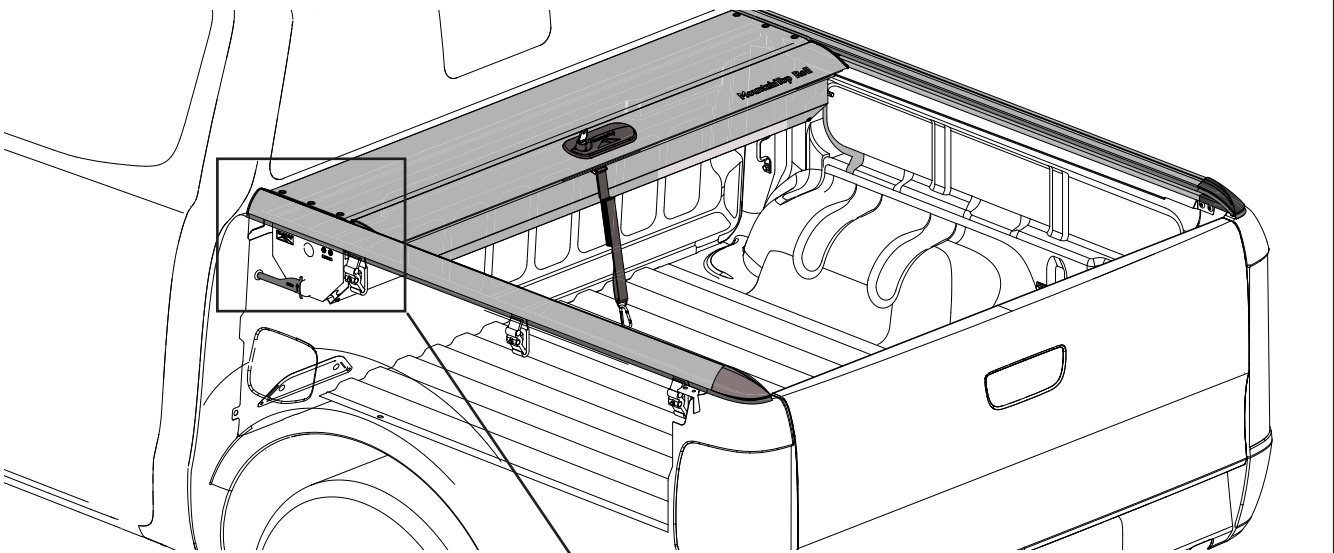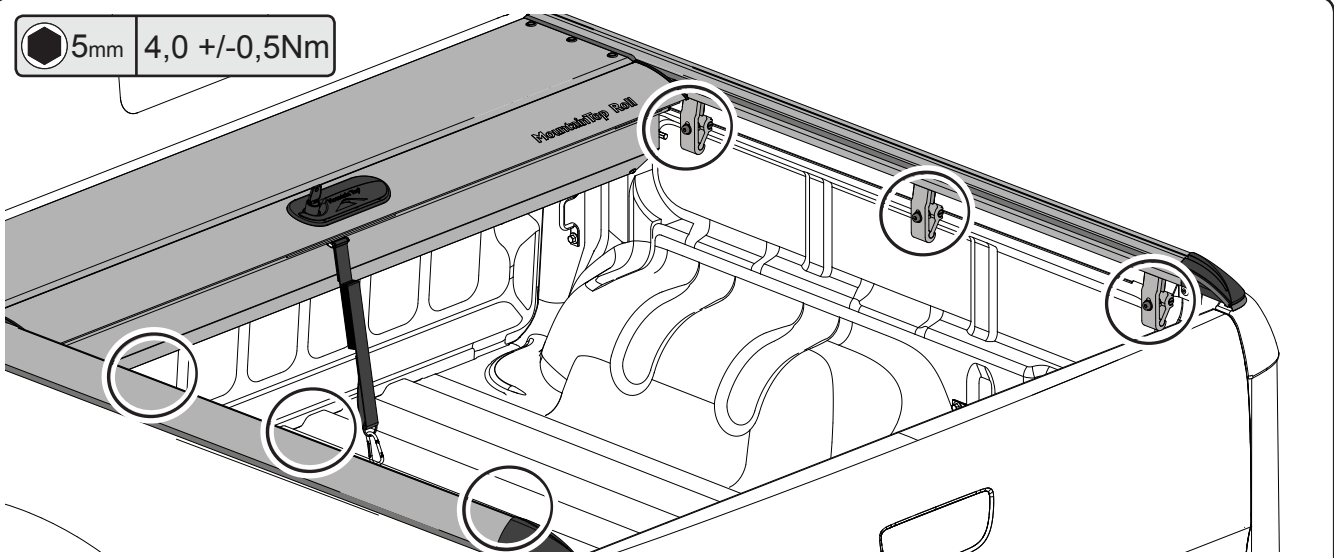




Mountain Top Roll with Tailgate hook
Installation Instructions

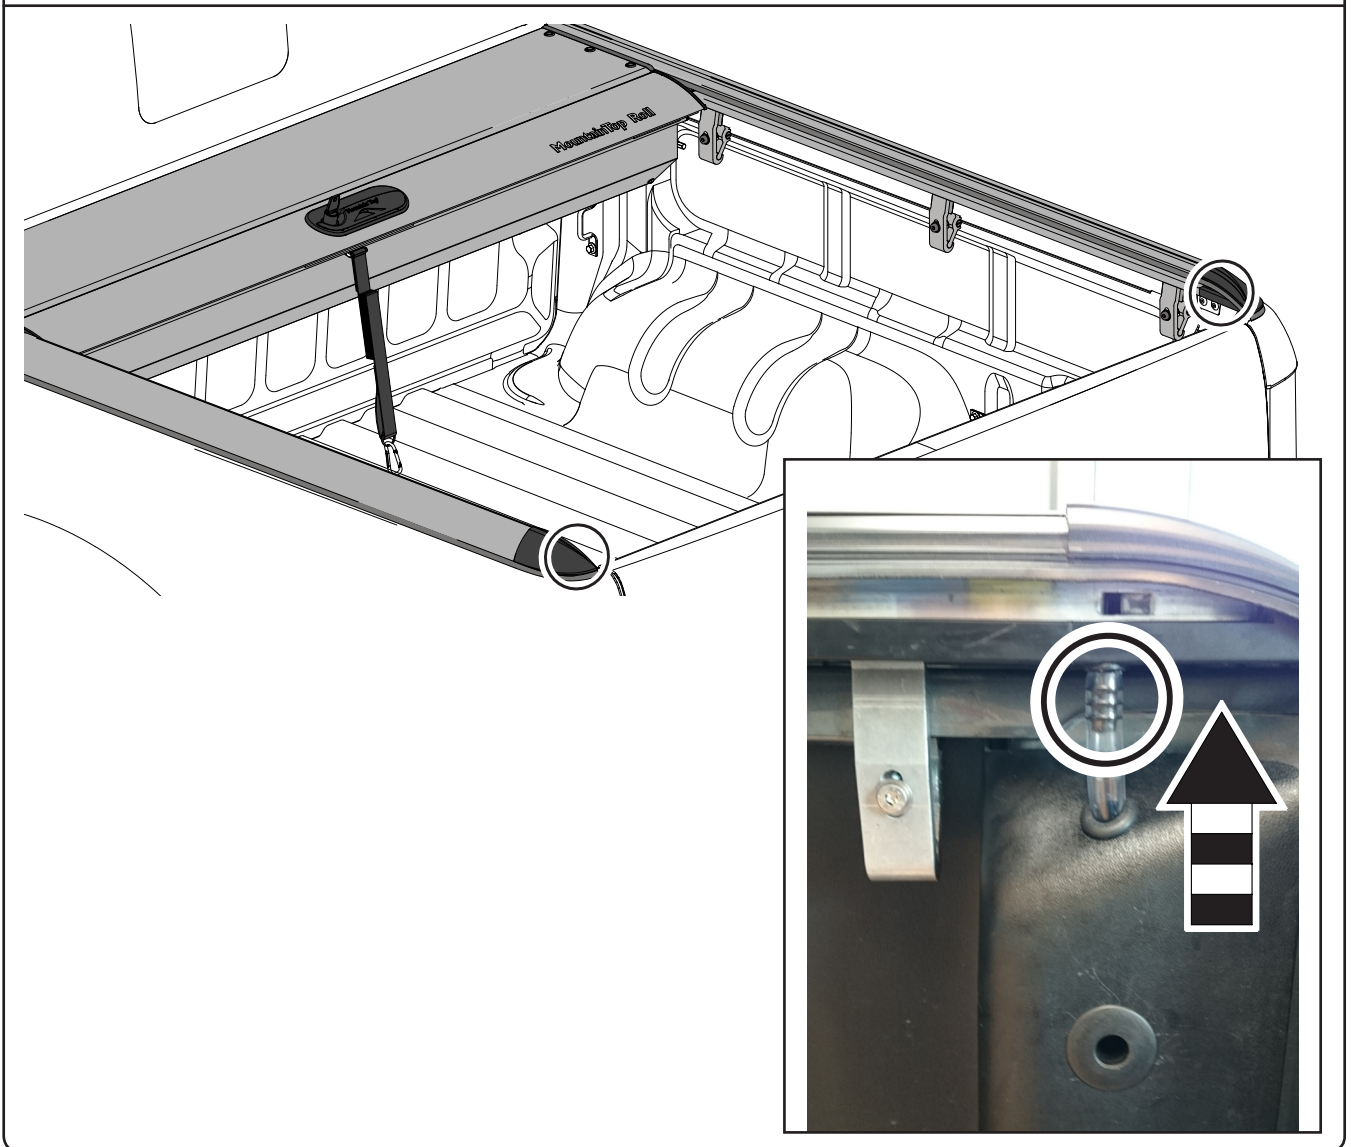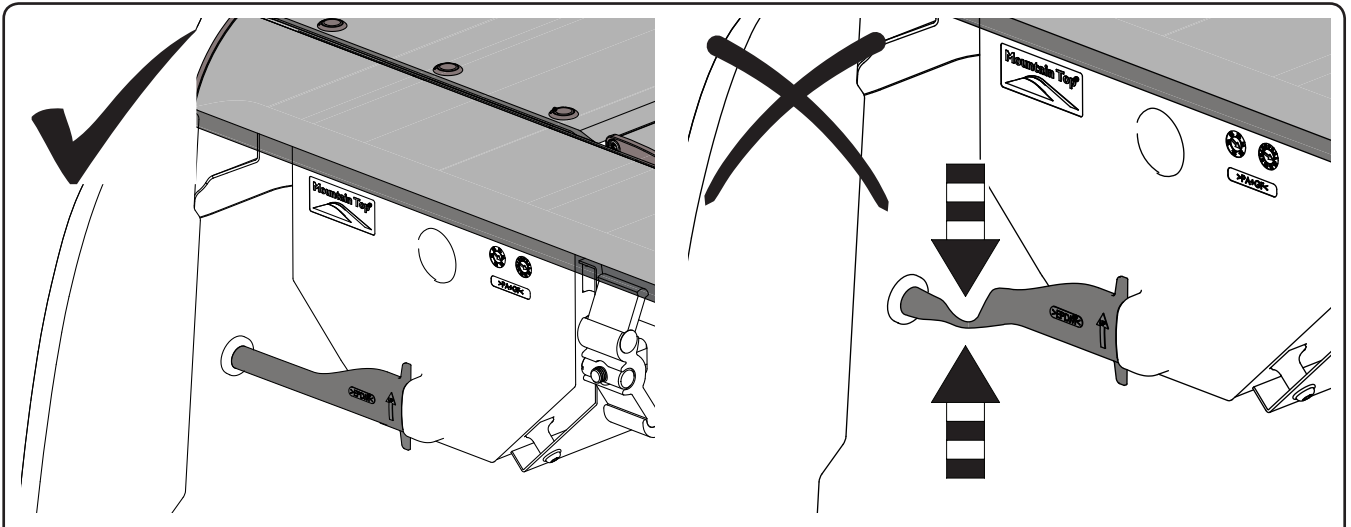




Mountain Top Roll with Tailgate hook
Installation Instructions

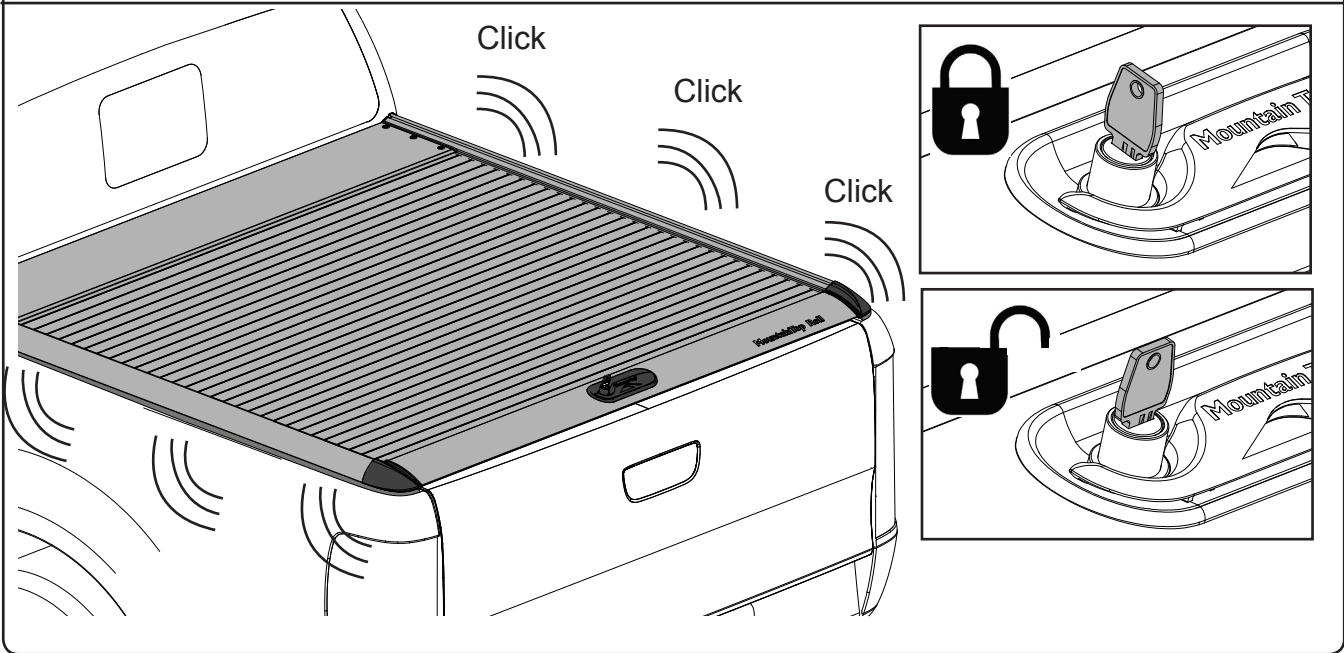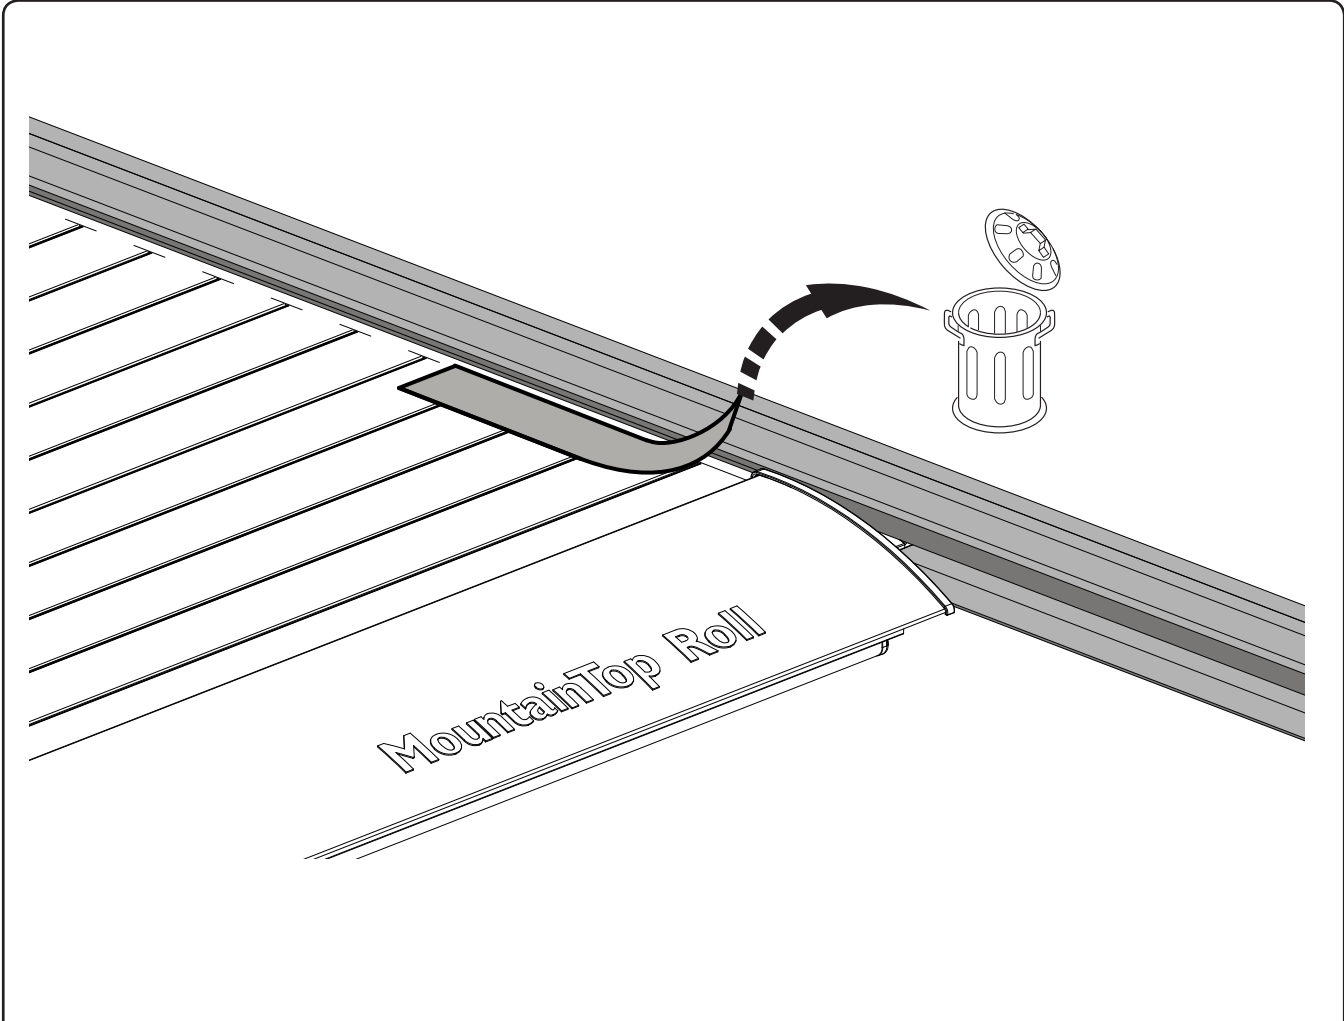




Mountain Top Roll with Tailgate hook
Installation Instructions

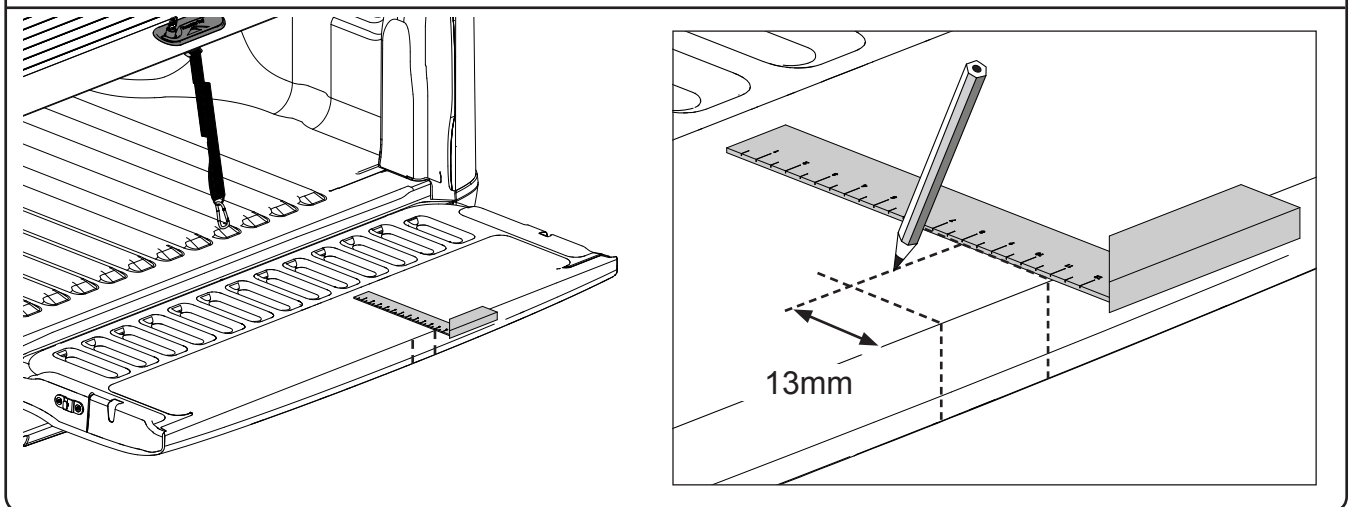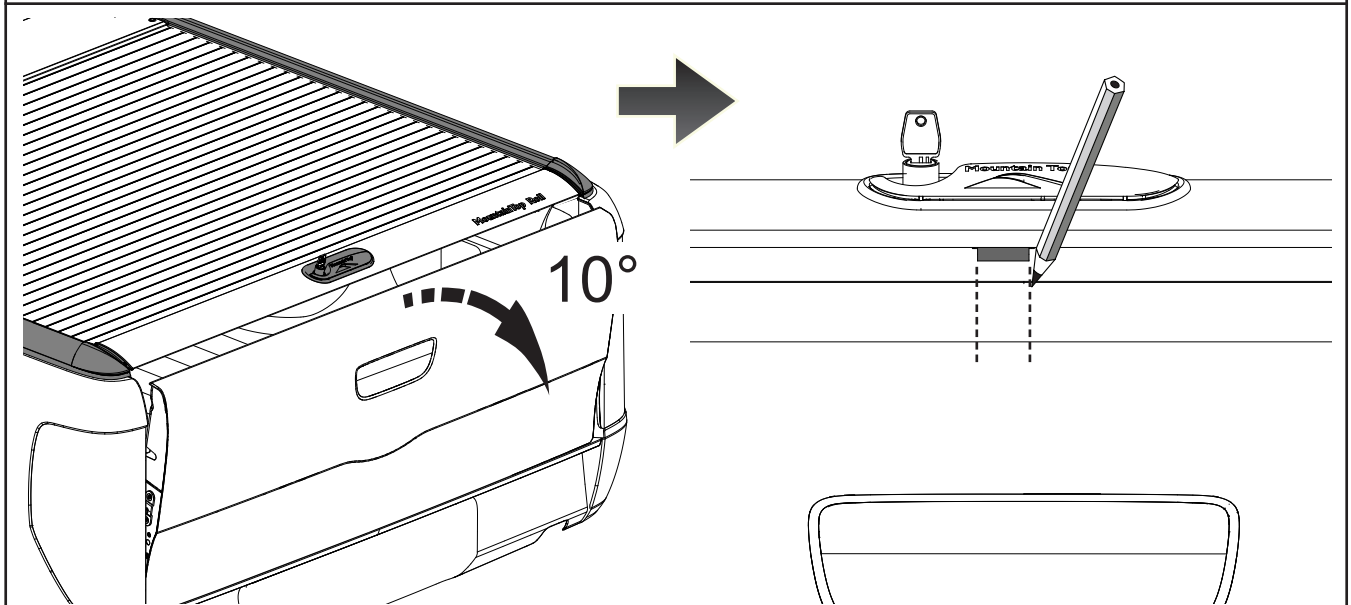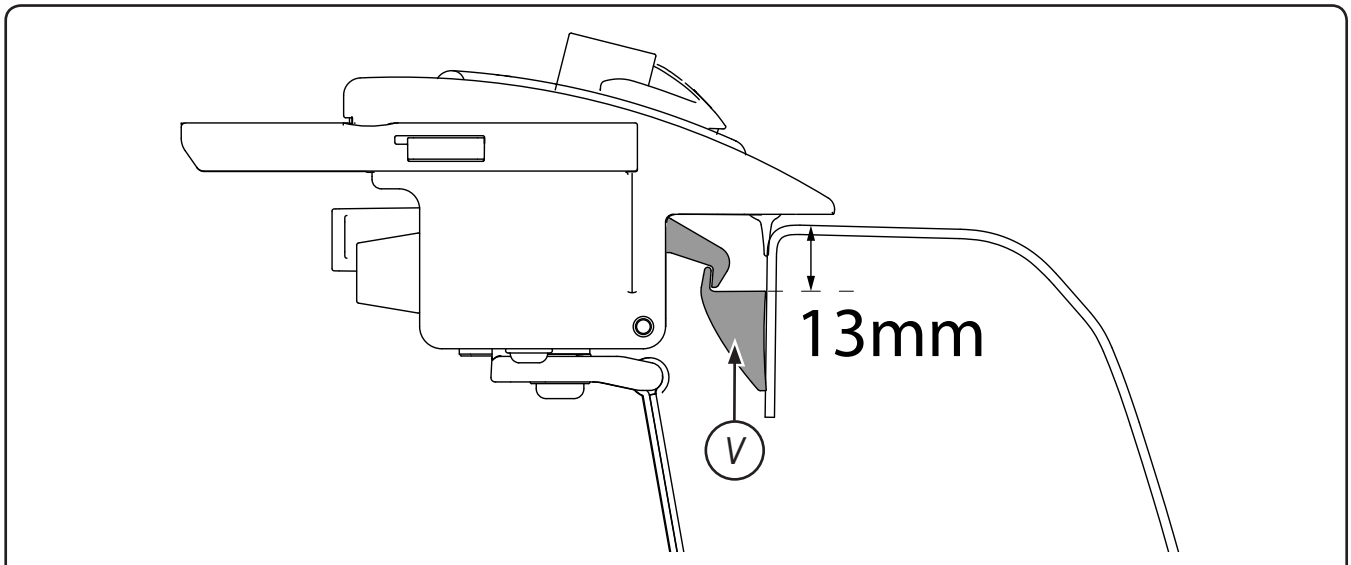

Mountain Top Roll with Tailgate hook Installation Instructions

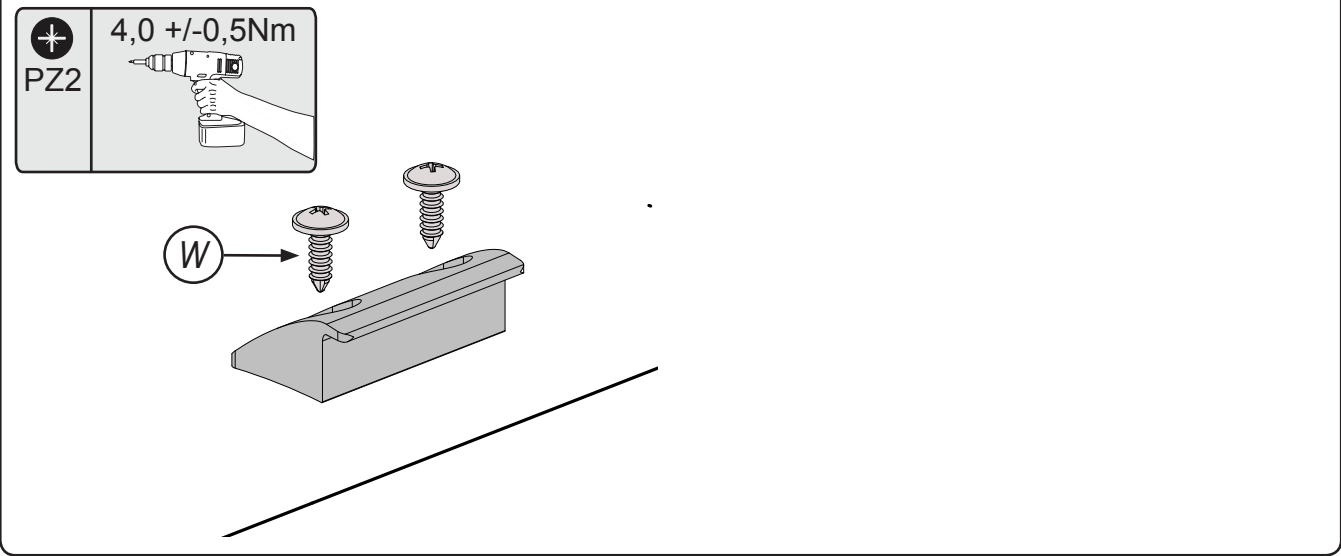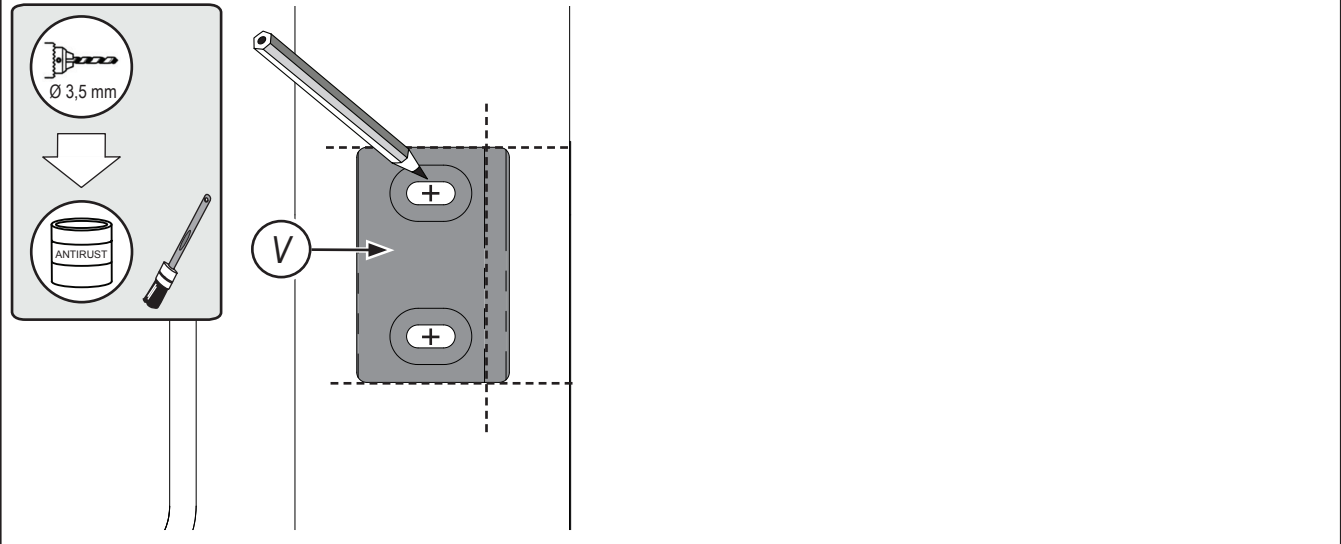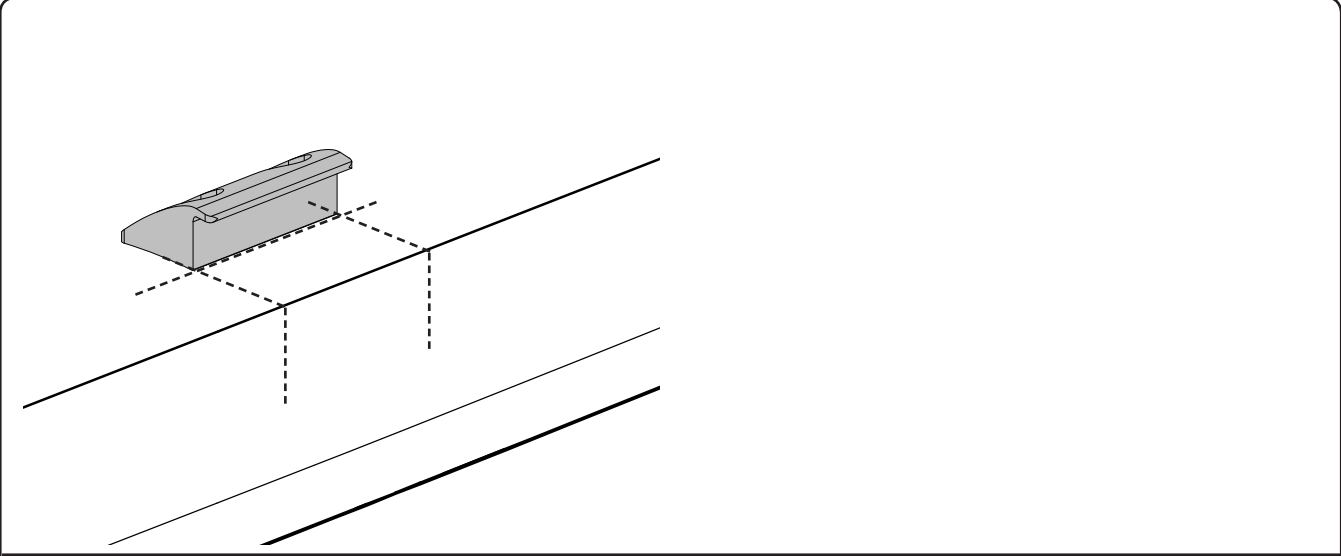

Mountain Top Roll with Tailgate hook
Installation Instructions

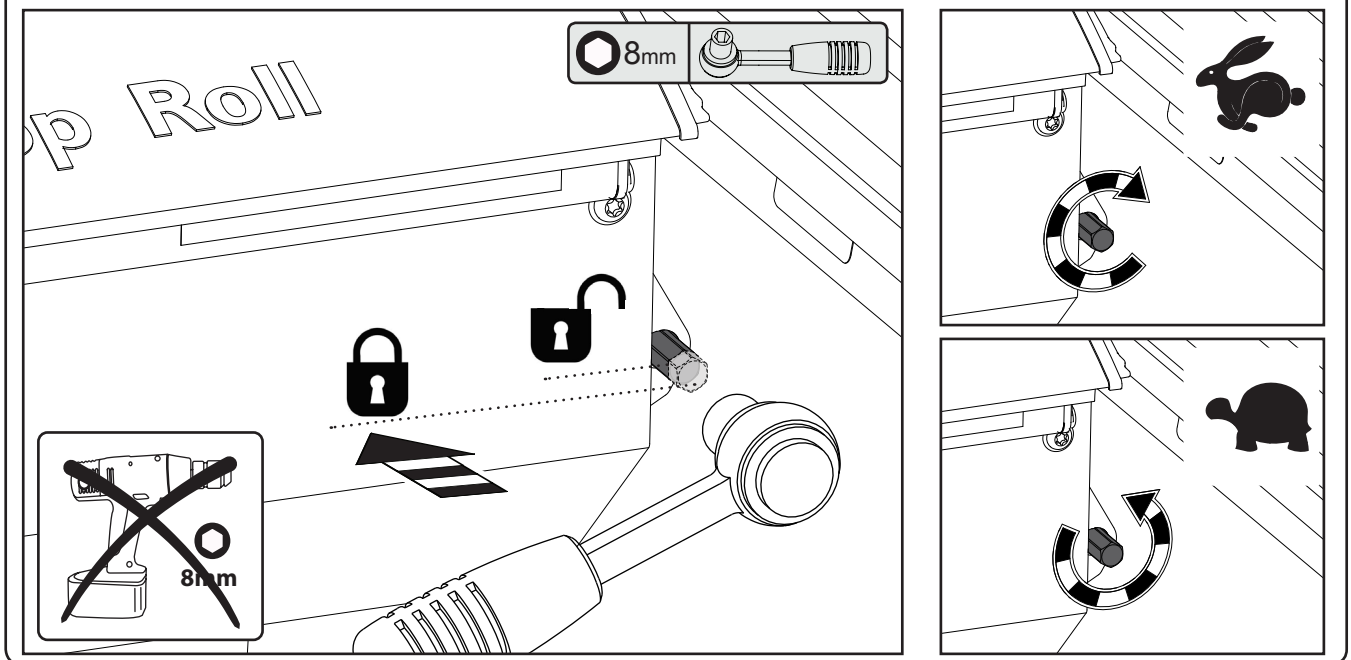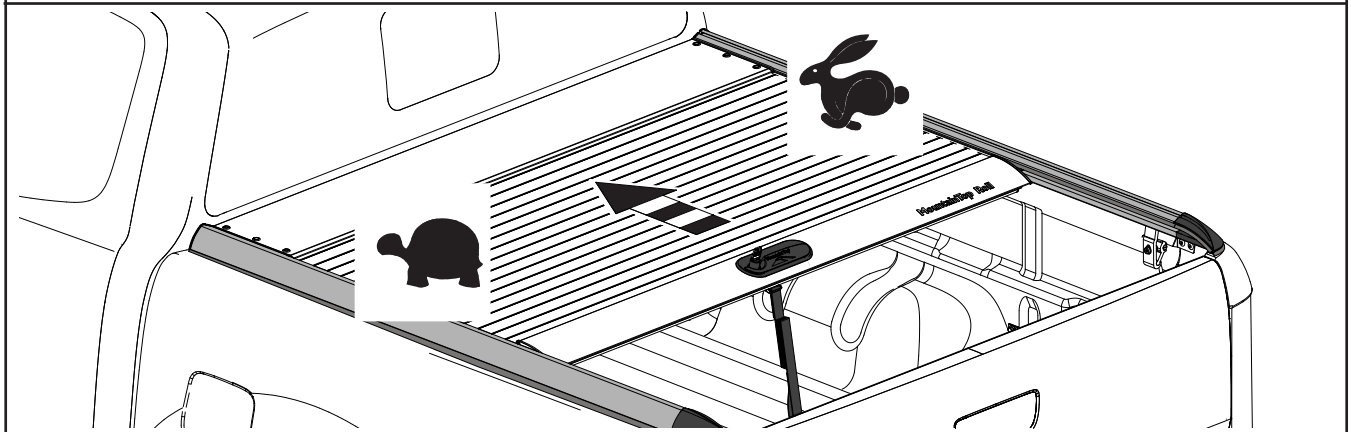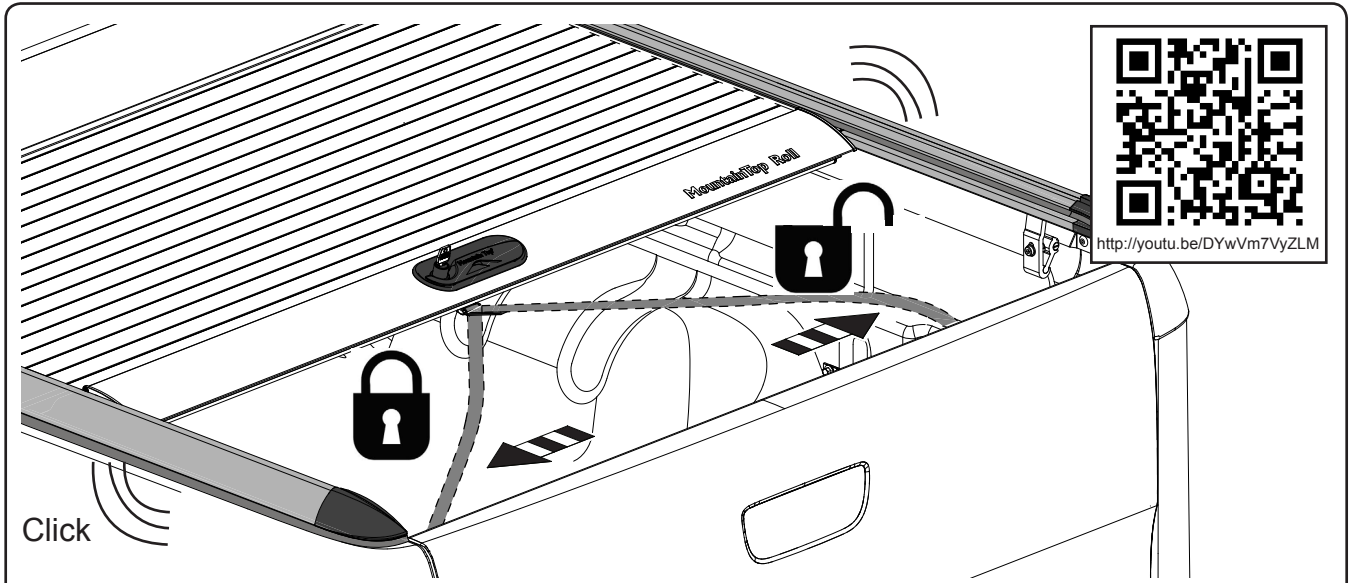

Mountain Top Roll with Tailgate hook
Installation Instructions

