

Step 1.

Unscrew ariel. Remove fittings from the underside of roof rails, Torx T30 bit required (not supplied) Two fittings front & two fittings rear. *(Please note, roof rails do not need to be removed from vehicle)*



Step 2.

Replace with fittings provided (Item 7 on fitting kit diagram) these are to be fitted by screwing a couple of threads in only at this stage – as shown below. **(Thread locker advised on these fittings)**



Step 3.

Use drawing diagram to determine the bracket locations (*predator branded are front*) and fit brackets to roof rails, do not tighten at this stage as adjustment and movement will aid fitting ease.

Step 4.

Place platform rack upside down on an even, protected surface. Insert T-slot bolt into recess where the plastic joining piece joins the rack together (length ways).


Insert at a 45-degree angle and then horizontal to insert. T-slot bolt will now slide in either direction, push two into one half of the rack, and 2 into the other half – repeat for other side.




Step 5 – Minimum 2 Persons Required

Lower the platform rack onto the mounting brackets. *(Note – the Platform rack has a 'Predator' logo on the front)*

Lower the rack down so that T-slot bolts slide within the slots located on the top of the mounting brackets.

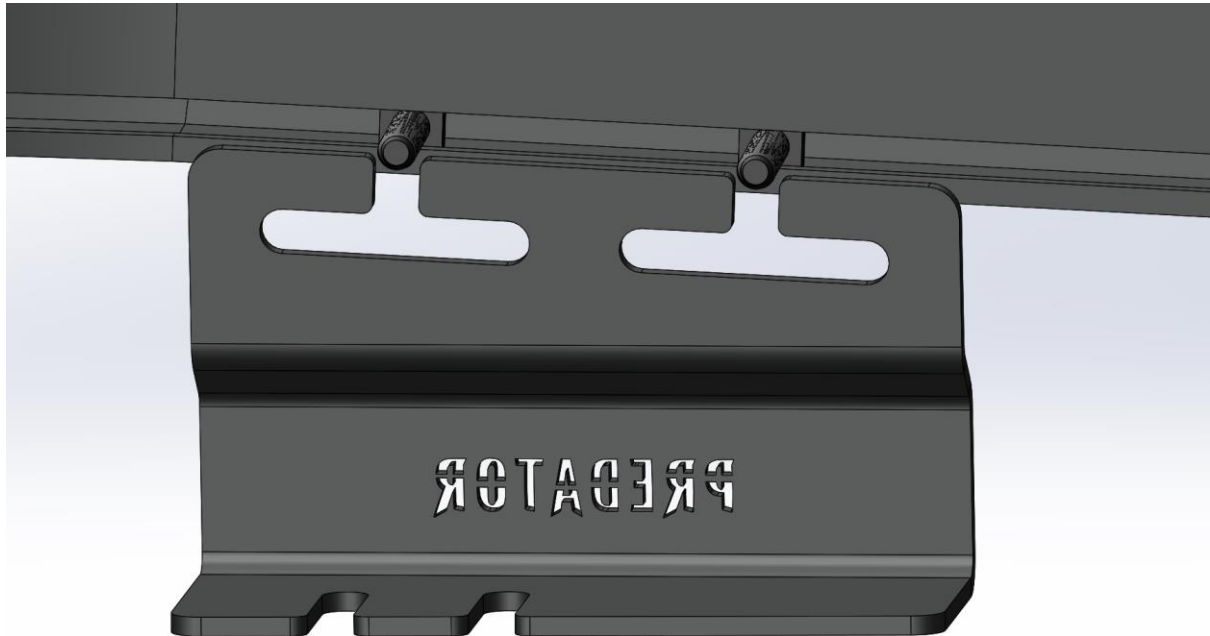

Once lowered, slide T-Slot bolts to either side of bracket and fit nuts (Don't fully tighten at this stage) Repeat for each mounting bracket.

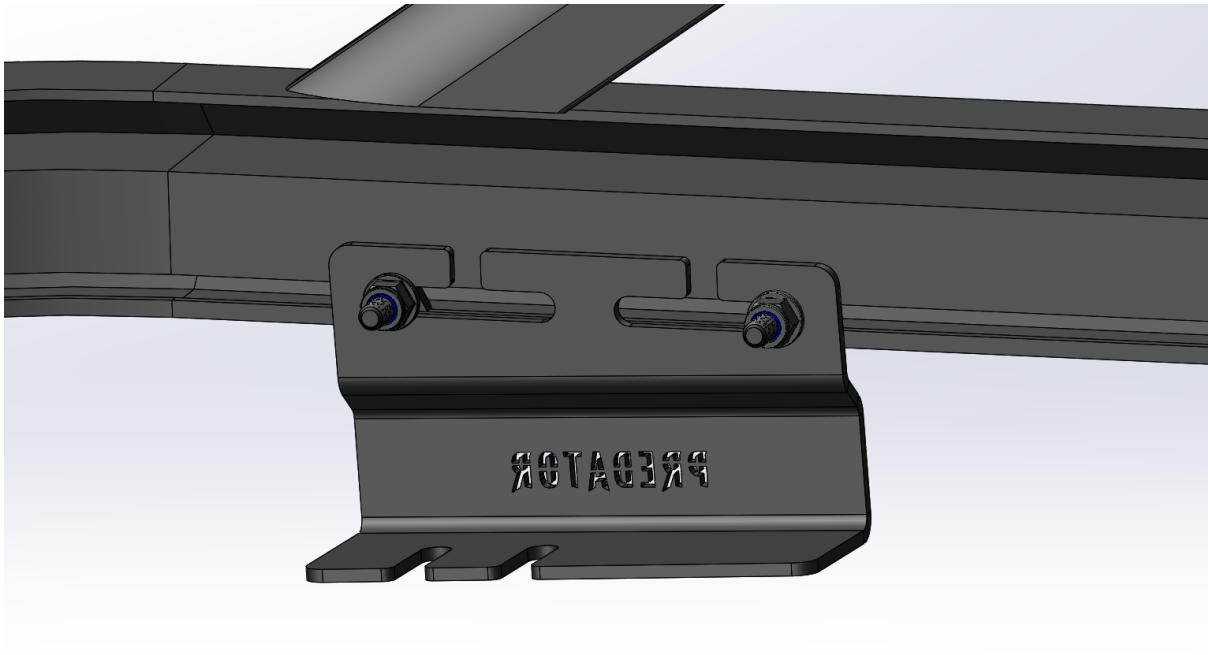

Step 6

Position platform rack into final desired position, (rack will move from side to side and front to back) and tighten all fixtures and fittings.

Please note – if you wish to re fit OEM ariel, a hole is required to be drilled in the platform rack to allow for this.

