



Part no: RANG5MIRRORMOD

## Ford Ranger 12on — Auto Mirror Fold Module

### Fitting Instructions:

#### What's supplied in the kit:


- 1 x Wiring Harness
- 1 x Eagle1 mirror module
- 3 x scotch locks + Cable Ties

Please check all items are present before starting the Install


#### Tools Required: Pair of Pliers

- 1) Test the Electric mirrors function correctly
  - Start the engine and press the mirror folding button and check the mirrors fold in and out correctly
- 2) Open up and remove access panel to fuse board
  - located next to drivers door, right hand side of steering wheel

2. Unlock the Central lock (through the remote control or car key)


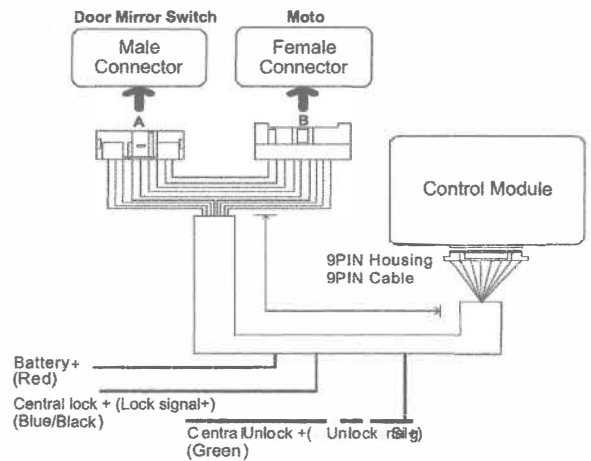


3) Remove the plug from the back of the Mirror switch

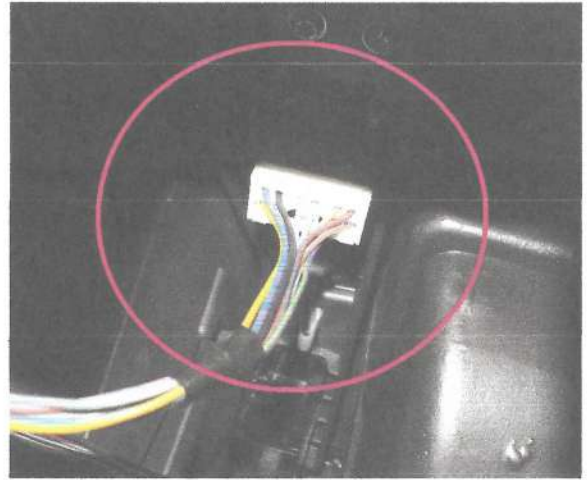

4) Plug the Vehicles Harness (removed in step 3) into the Mirror Fold Hardness

5) Plug the mirror fold hardness back into the vehicles mirror switch

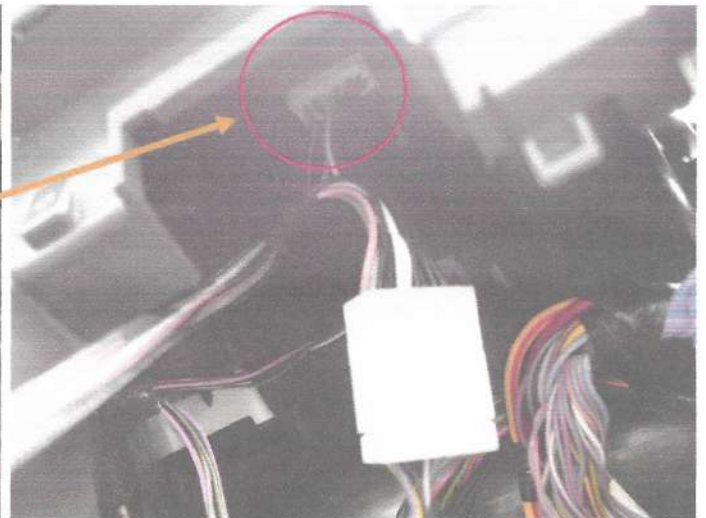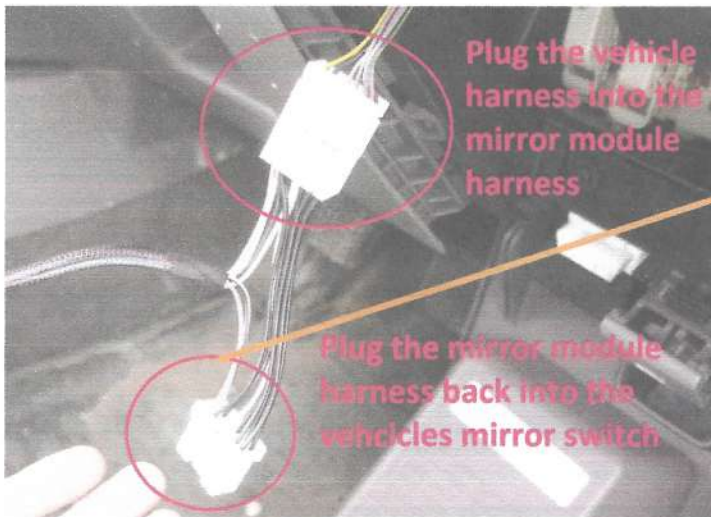

6) Connect Wires

Option 1) Mirrors fold in when you lock the Truck and unfold when you unlock the truck

Option 2) Mirrors Fold in when you lock the truck and unfold when you turn on the ignition.

OPTION 1) Connect the 3 wires, Central locking unlock and Lock and the permanent 12v feed

- Use scotch locks provided—ensure you squeeze together tightly to get a proper connection (use pliers)

Mirror Module Hardness		Vehicle Wire Colour
Red	12v	Red
Blue	Lock Signal	Grey with Brown Chase
Green	Unlock Signal	Green with Brown Chase 2016 + Model = Purple/green

- You will locate the central locking signal wires in a loom to the right of the fuse board, you can also locate all the wires needed behind the kick plate in the foot well (there is more room here and easier to do).
- Central locking wires are usually thicker than other wires in the same loom
- 12v Wire is found behind kick plate in foot well



Option 2:)

Connect 2 Wires Blue Central locking Lock and Red 12V Permanent live


Option 2) Mirrors Fold in when you lock the truck and unfold when you turn on the ignition.




## Central locking connections

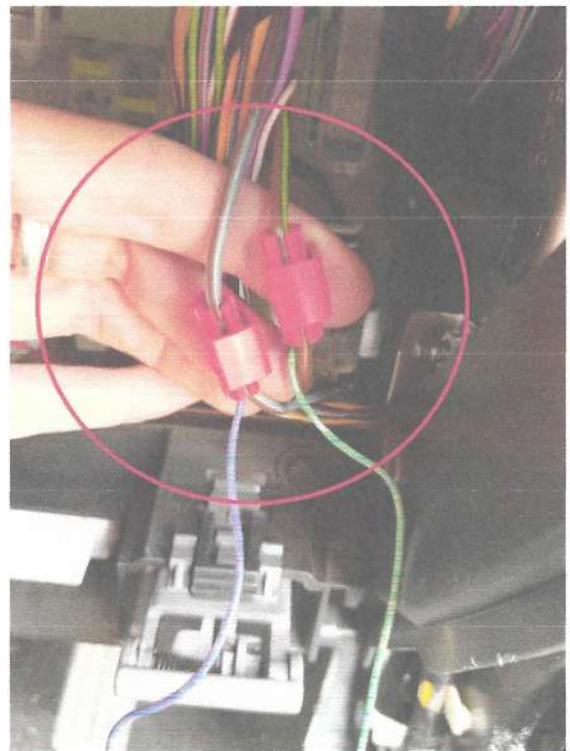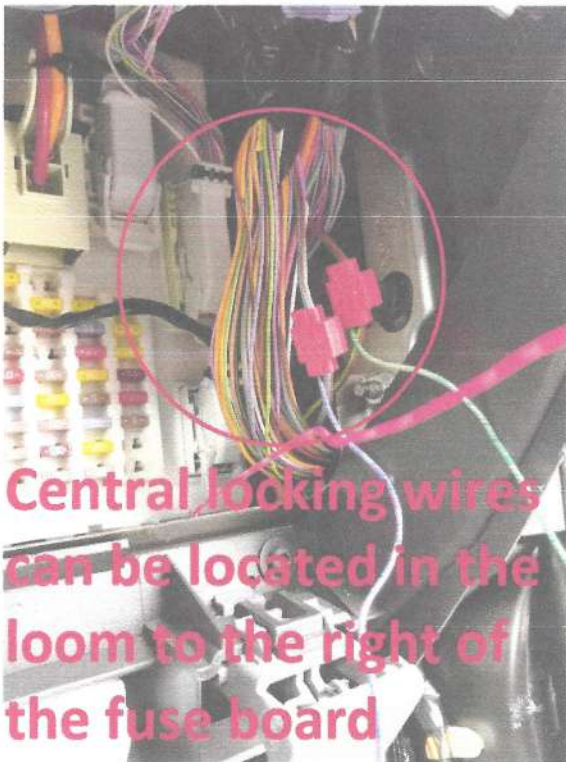

To connect the 12v Power feed, remove the kick plate in the drivers foot well, You find a red permanent live on the connector closest the front of the car, connect to this wire

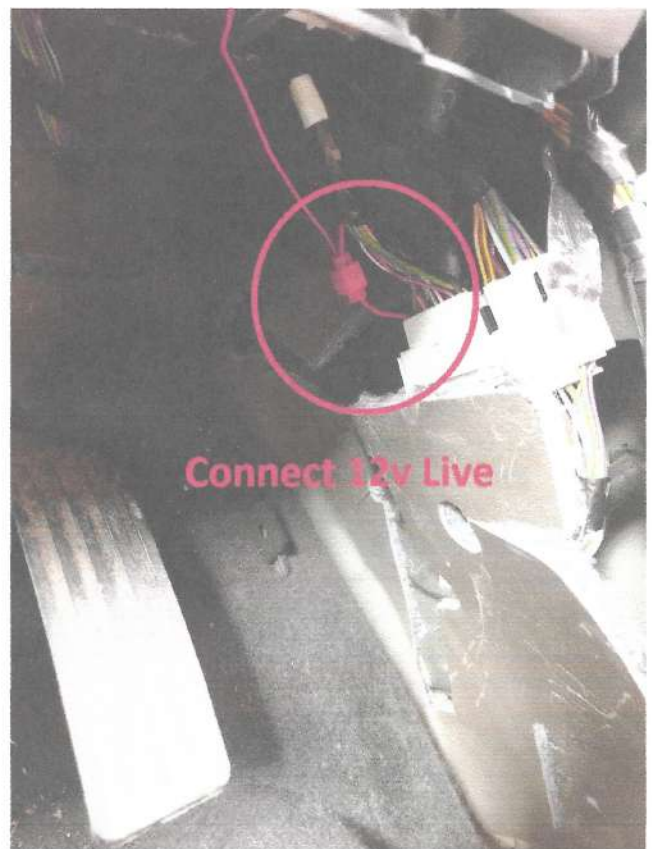

7) Plug module into harness

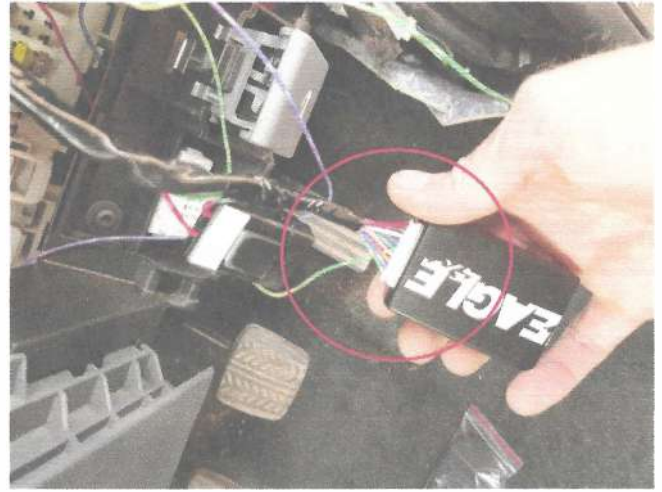

8) Test everything is working correctly

- Close all vehicle doors and click lock on your key fob, the mirrors should now automatically fold in

9) Fit the box somewhere secure and safe using the Double sided tape and replace any panels you have removed

## NOTES:

You are still able to fold the mirrors in and out using the button in the Cab, But please remember if you leave the button pressed in when you next unlock the car the mirrors will not Auto Fold Out you will need to press the de press the button in the Cab

If you require any help with installation please call us on +44 (0)1677 428799  
or eMail to [sales@4x4at.com](mailto:sales@4x4at.com)